R990525

This manual contains safety information that if ignored can endanger life or result in serious injury. They are indicated by this icon.

Keep the controller protected from sun and water.
Avoid water splashes.

OPERATING INSTRUCTIONS FOR "JA SERIES"

PRINTED ON RECYCLED PAPER • PRINTED ON RECYCLED PAPER •

Read Carefully !

ENGLISH Version

R27-12-25

Descrizione Prodotto
Product Description

Sistema regolazione singola da incasso, serie JA PRO
Single built-in adjustment system, JA PRO series

Codici Identificativi Prodotto
(i simboli "_" completano il codice del prodotto in base alla configurazione delle varianti)
Product Identification Codes
(the "_" symbols complete the product code based on the configuration of the variants)

JACD _____
JACDIN _____
JACDIPR _____
JACDPRO _____
JACL _____
JACLPRO _____
JAPH _____
JAPHPRO _____
JARH _____
JARHPRO _____

GENERAL SAFETY GUIDELINES

Danger!

In emergencies the controller should be switched off immediately! Disconnect the power cable from the power supply!

When installing always observe local regulations!

Manufacturer is not liable for any unauthorized use or misuse of this product that may cause injury, damage to persons and / or materials.

Caution!

Controller must be accessible at all times for both operating and servicing. Access must not be obstructed in any way!

Feeder should be interlocked with a no-flow protection device to automatically shut-off the pumps when there is no flow!

Pumps and accessories must be serviced and repaired by qualified and authorized personnel only!

Always discharge the liquid end before servicing the controller!

Empty and rinse the liquid end before work on a pump which has been used with hazardous or unknown chemicals!

Always read chemical safety datasheet!

Always wear protective clothing when handling hazardous or unknown chemicals!

Controller must be operated / serviced by trained technicians only!

All connection operations must be performed while the controller is not connected to main supply!

Missed activation for Min/Max alarm and Maximum Dosing Alarm may cause hazardous overdosing!

Introduction

JA SERIES is a microprocessor based digital controller for **conductivity** or pH or Redox or chlorine or temperature** (see controller's label for bought model) with temperature reading, mA module and native modbus. On/Off, impulsive proportional and PID are main working modes. Working ranges for Conductivity are from 0nS to 9999S with automatic range and Measure / product** for best results. All information are provided through a large LCD display. Using a revolutionary wheel control the controller can be easily programmed. JA SERIES is housed in a IP45 plastic box.

INPUTS:
- Stand-by
- Flow
- Conductivity probe
- Temperature probe

OUTPUTS:
- 2 relay outputs free contact + 1 Alarm output
- 1 opto coupled pulses output
- 1 current output (mA)

****Ohm - H_3PO_4 - H_2SO_4 - HNO_3 - HCl - NaOH - NaCl - TDS / PPM ($CaCO_3$ and NaCl)**

The wheel

JA SERIES has a wheel that must be used to control the controller. Wheel can be rotated in both directions to scroll over the menus and / or pressed to confirm highlighted selection / value.

NOTE: Once changes are made press "OK" to save and exit from submenu. Press "ESC" to exit without saving.

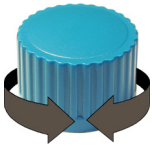

SCROLL

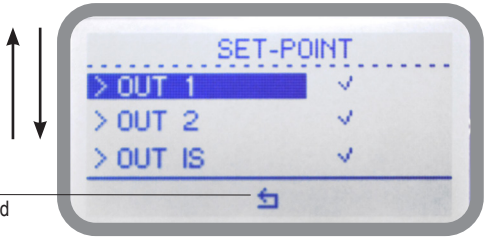

Click here for previous menu and saving* settings

Rotate wheel to scroll through menus or options

*where specified

PRESS

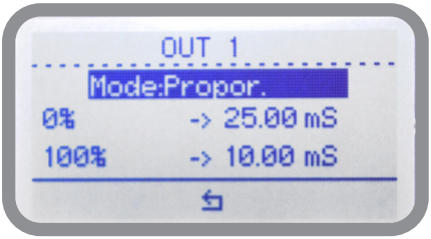

Press wheel to select highlighted option

Mainboard Connections JACD

Unplug controller from main power supply then perform connections by following the picture below.

DC Version Model:

1(-) - 2(+): 12 or 24VDC (**see controller's label)**

AC Version Model:

L(Live) - N(Neutral): 85÷264VAC or 18÷36VAC 50/60 Hz (**see controller's label)**

3(Common) - 4(N.O.): Setpoint 1 Output (free contact output max 2A)

5(Common) - 6(N.O.): Setpoint 2 Output (free contact output max 2A)

7(Common) - 8(N.O.): Alarm Output (free contact output max 2A)*

9(-) - 10(+): Standby contact*

11(-) - 12(+): Opto coupled output NPN PULSE. To use with "IS", "MF", "PLUS" series pumps **(max 50mA / 24VDC)***

13(GND) - 14(- Blue) - 15(Black) - 16(+ Brown): Proximity sensor mod. "SEPR" (dont' remove jumper on blocks 13 and 14)

17(- RS485) - 18(+ RS485): RS485 (Modbus / Communication)*

19 (Signal, OUT Probe) - 20 (Power, IN Probe): Conductivity probe input

23 & 24 - 25 & 26: PT100 temperature probe (remove jumper / resistor when probe is installed)

27(+) - 28(-): mA Current Output (Max resistive load: 500Ohm)

Warning: Connections must be performed by qualified and trained personnel only
***Some functions aren't available on standard models (see page 25)**

Warning: Do not connect the power supply of the dosing pumps in PWM mode.
Warning: Maximum relay output power consumption in PWM mode: 5 W.

Connections for JAPH / JARH / JACDIND / JACL / JASCL / JATEMP

Unplug controller from main power supply then perform connections by following the picture below.

Probe connector for pH or ORP model only

DC Version Model:

1(-) - 2(+): 12 or 24VDC (**see controller's label)**

AC Version Model:

L(Live) - N(Neutral): 85÷264VAC or 18÷36VAC 50/60 Hz (**see controller's label)**

3(Common) - 4(N.O.): Setpoint 1 Output (free contact output max 2A)
5(Common) - 6(N.O.): Setpoint 2 Output (free contact output max 2A)
7(Common) - 8(N.O.): Alarm Output (free contact output max 2A)*
9(-) - 10(+): Standby contact*
11(-) - 12(+): Opto coupled output NPN PULSE. To use with "IS", "MF", "PLUS" series pumps **(max 50mA / 24VDC)***
13(GND) - 14(- Blue) - 15(Black) - 16(+ Brown): Proximity sensor mod. "SEPR" (dont' remove jumper on blocks 13 and 14)
17(-RS485) - 18(+RS485): RS485 (Modbus / Communication)*
20(Blue / GND) - 21(Brown / SIGNAL) - 22 (Yellow / POWER): Inductivity probe input **(JA CDIND models only)**
23(-485 Brown) - 24(+485 White) - 25(GND Yellow) - 26(+5V Blue): SCL probe input **(JA CL models only)**
27(+) - 28(-): ECL6 probe input **(JA CL models only)**

ECDIND PT	**29/30(Green) - 31/32(White):** PT100 temperature probe (remove jumper / resistor when probe is installed)
ECDSIND PT	**29/30(Green) - 31/32(White):** temperature from inductivity probe
PH/RH/CL	**29(Green) - 30(Brown) - 31(White) - 32(Yellow):** PT100 temp. probe (remove jumper / resistor when probe is installed)

33(+) - 34(-): mA Current Output (Max resistive load: 500Ohm)

Warning: Connections must be performed by qualified and trained personnel only
***Some functions aren't available on standard models (see page 25)**

Warning: Do not connect the power supply of the dosing pumps in PWM mode.
Warning: Maximum relay output power consumption in PWM mode: 5 W.

Main Screen

When into normal operating mode, JA SERIES shows the following main screen:

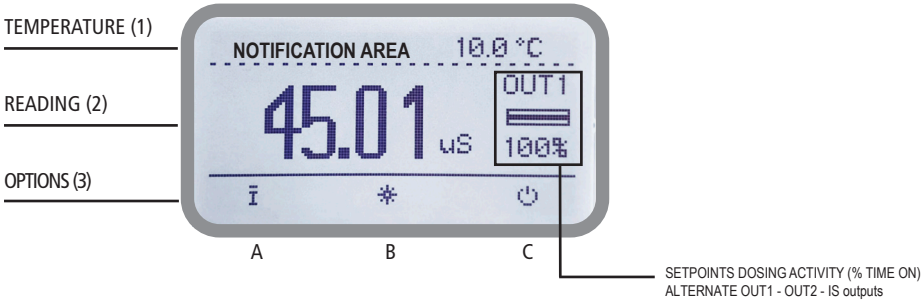

Main screen zones:

(1) TEMPERATURE

Temperature read by PT100 probe.

(2) READING

Values read by the probe. "mS" - "uS" - "PPM/TDS"* are the measuring unit for Conductivity probe. To change unit refer to "GENERAL OPTIONS" menu.

"mV" is the measuring unit for "JA RH" models.
"pH" is the measuring unit for "JA PH" models.
"mg/l" is the measuring unit for "JA CL" models.

According to selected probe, this field may appear different.

(3) OPTIONS

(A) Quick Status Check summary (see page 7)

(B) Main menu (see page 9)

(C) Enable or Disable the controller (it still remains powered)

NOTIFICATION AREA

These fields are related to STANDBY / NO FLOW / ALARM condition. During critical situations a warning / alarm message may appear. To in-depth explanation **completely rotate clockwise** the wheel to review main controller parameters and current outputs status.

***PPM / TDS unit is based on 1mS = 640 PPM of TDS ($CaCO_3$ total dissolved solids)**
***PPM / TDS unit is based on 1mS = 680 PPM of TDS (NaCl total dissolved solids)**

Note: the word "PUMP" as shown into this manual refers to a "dosing device" connected to the controller!

Quick status check

From main screen **select** I to review main controller parameters and current outputs status.

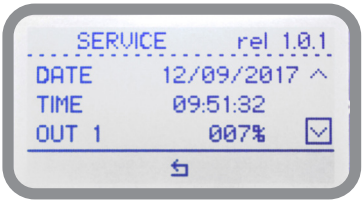

Software Release
Local Time
Local Date
Setpoint Output 1 status*

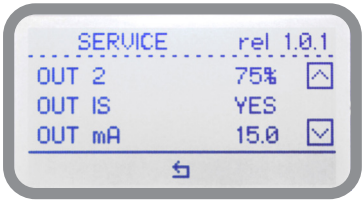

Setpoint Output 2 status*
Pulse Output status (YES: ENABLED)
mA Output reading

LAN connection status (option)
WIFI connection status (option)
GSM Modem connection status (option)

*based on 100 seconds scale,
i.e.: 7% (7seconds ON, 93seconds off)

Password

At first start of the controller there is no password set. To set a new password with administrator privileges to enter the main menu by clicking on the icon, ,then select "Settings", press the dial and select "PASSWORD". Press the knob and insert a code of four numbers. Move on the icon and press the knob to save the settings. The new administrator password (ADMIN) is now active.

For **JA PH** model shown unit is pH

For **JA RH** model shown unit is mV

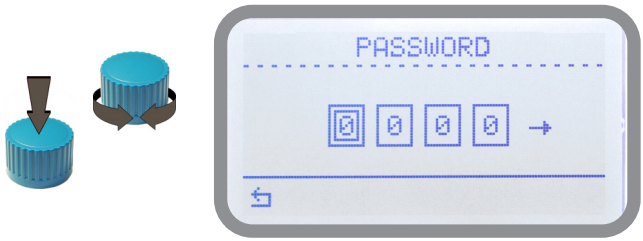

To set a new passcode choose "GENERAL OPTIONS" from "Main Menu" , move on "PASSWORD", click on wheel and enter a four numbers code. Move on to save settings. The new passcode is activated.

Lost passcode ?

Please dont' forget the passcode (if changed). In the unfortunate event, please call your local distributor for unlocking procedure. There is no way for you to recover lost passcode.

"Main Menu" list

To grant access into "Main Menu" enter the passcode (as described in previous chapter). Once into "Main Menu" rotate the wheel to scroll through all the options available.

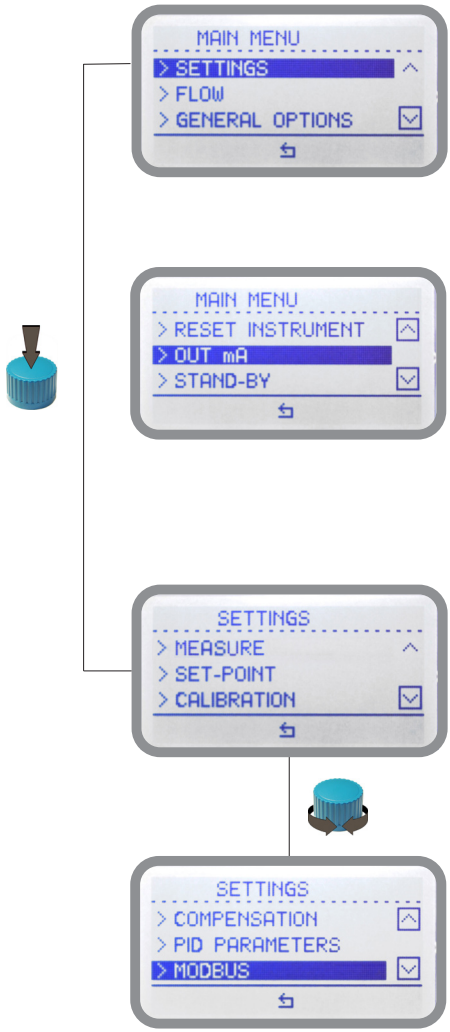

Settings (see page 9)
Flow (see page 20)
General Options (see page 20)

Reset Controller (restore all parameters)
Out mA (see page 21)
Standby (see page 21)

Measure (see page 10)
SetPoint (see page 10)
Calibration (see page 14)

Compensation for JA CD model (see page 17)
PID Parameters (see page 13)
MODBUS (see page 19)

"Settings / Measure" (JA CD / CDIND series only)

According to connected probe the "K" factor can be selected between 1 - 10 - 01. "Automatic Range" let the controller automatically set the most suitable scale according to reading range or press the wheel to choose between **Ohm - H3PO4 - H2SO4 - HNO3 - HCl - NaOH - NaCl - TDS / PPM - 0-999.9nS - 0-999.9uS - 0-999mS** (see page 22 for more info). Move cursor on to save changes. Move to for previous menu without saving changes. For "JA CDIND" version the "automatic range" item is replaced by the working scale selector (ppm TDS: 3000 mS - 300 mS - 30 mS).

Note: these changes must be set according to probe reading capacity. See probe's datasheet to choose correct values.

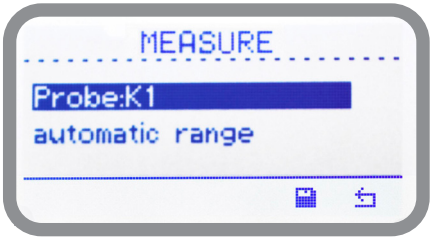

Version JA CD

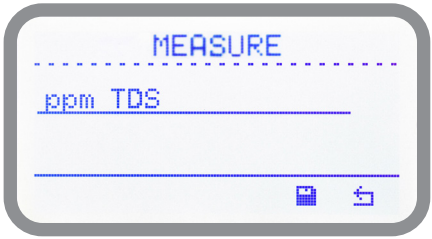

Version JA CDIND

"Settings / Set-Point"

Before to enter setpoint parameters choose which output to configure between OUT 1 and OUT 2 (free contact output max 2A) and OUT IS (NPN "CD PULSE". To use with "IS", "MF", "PLUS" series dosing pumps max 50mA / 24VDC).

OUT 1 and OUT 2 use the same configuration settings and can ben set operate individually between 3 working modes: "ON/ OFF" mode, "PROPORTIONAL" mode and "PID" mode.

OUT IS can be set to operate in P/M mode only.

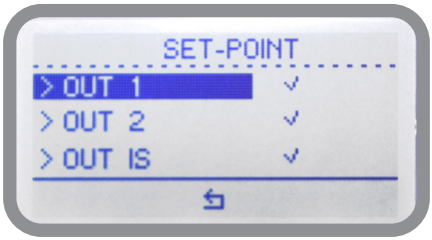

“ON/OFF” mode (e.g. conductivity)

This working mode ca be set for OUT1 and OUT2 outputs.

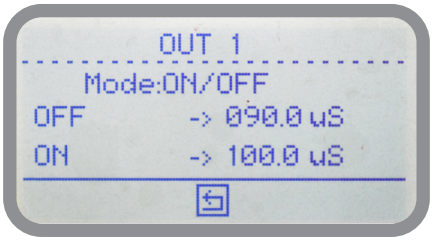

ON/OFF mode

Set Conductivity value at 100uS ON and 90uS OFF. The difference between the two Conductivity values is called HYSTERESIS.

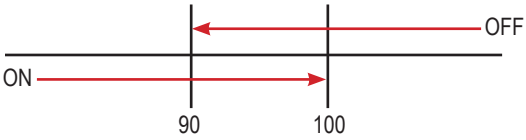

Setpoint output will stay OFF until reading value will reach 100uS
Setpoint output will stay ON until reading value will decrease to 90uS
Conductivity pump will stay into its previous status into HYSTERESIS AREA

"PROPORTIONAL" mode (e.g. conductivity)

This working mode ca be set for OUT1 and OUT2 outputs.

Proportional mode set the controller to operate using a calculated percentage based on a 1000 seconds scale between two set values that enable or disable the Conductivity pump. To use this mode move cursor on "Working Mode". Press the wheel and select it.

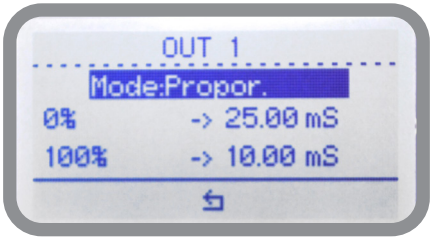

PROPORTIONAL MODE between 10mS (0%) and 25mS (100%). [100 seconds scale]

This mode operates Conductivity pump for a value lower that 10mS with maximum dosing capacity and it will stop Conductivity pump for a reading value higher than 25mS. Between these two vales (17,5mS) the pump will be controlled into proportional mode (50seconds ON, 50seconds OFF).

"PID" mode (e.g. conductivity)

A proportional-integral-derivative controller (PID controller) is a control loop feedback mechanism (controller) widely used in industrial control systems. A PID controller calculates an error value as the difference between a measured process variable and a desired setpoint. The controller attempts to minimize the error by adjusting the process through use of a manipulated variable. The PID controller algorithm involves three separate constant parameters, and is accordingly sometimes called three-term control: the proportional, the integral and derivative values, denoted P, I, and D. Simply put, these values can be interpreted in terms of time: P depends on the present error, I on the accumulation of past errors, and D is a prediction of future errors, based on current rate of change.[1] The weighted sum of these three actions is used to adjust the process via a control element such as the position of a control valve, a damper, or the power supplied to a heating element.

Before enabling this mode configure the required parameters within "SETTINGS" -> "PID PARAMETERS" menu,

- **Time INTEGRATIVE** value (time needed to the controller to activate a procedure as answer to a plant's change. E.G.: time needed for pump activation when reached a set value.) Default value: 60 seconds.

- **Time DERIVATIVE** value (time needed to the controller to react to a plant's status change. E.G.: if pH value in water increase, the time integrative is the time needed to notify the change.) Default value: 3 seconds.

- **MODE** between + (dosed chemical is used to increase conductivity) or - (dosed chemical is used to decrease conductivity)

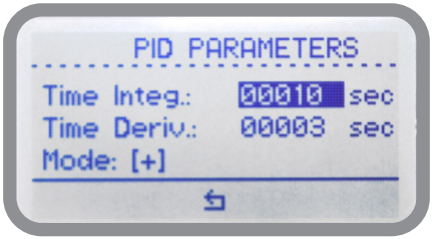

Move to ⇦ for previous menu and saving changes. Within "SETPOINT" menu choose the related OUTPUT then move wheel to select PID MODE. Parameters to set are:

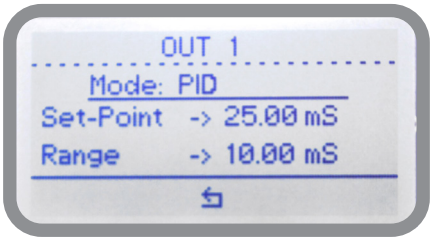

- **RANGE** value. Range is the maximum PID value over or under which (depending on Mode+ or Mode-) the controller will automatically switch into proportional mode

- **SETPOINT** which is the optimal value to achieve. Move to ⇦ for previous menu and saving changes.

"CALIBRATION" (JA CD series)

Conductivity calibration procedure involves a "SLOPE" value that requires a buffer solution having a value near the working range. Calibrate using plant's temperature otherwise unattended results may occur. Verify probe selection into "SETTINGS", "Measure" before to start calibration procedure. Then choose "CALIBRATION" then "CONDUCTIVITY" to begin calibration procedure.

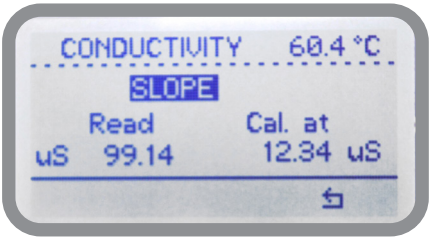

SLOPE", dip probe's head into a buffer solution having value near to real-working value and wait until controller's reading is stable then press wheel, enter buffer solution's value as second point calibration value move the cursor to "check" to confirm the displayed value. To stop the calibration procedure, select "X".

Temperature calibration. A professional thermometer is required to obtain a reliable calibration.
Within "CALIBRATION" menu choose "TEMPERATURE".

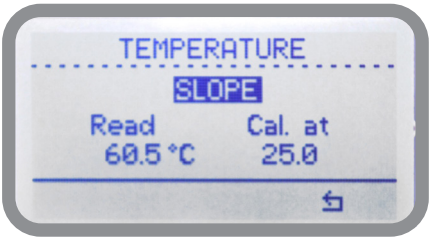

Note: This procedure assumes that controller is correctly installed and configured, connected to a working PT100 probe. Calibrate using plant's temperature otherwise unattended results may occur.

Using an external thermometer to read actual temperature and edit related field "Cal. at". Confirm by pressing wheel.

To revert both calibration to previous settings use "RESET CALIBRATION" menu.
To obtain reliable results the controller should be correctly installed, configured and connected to a working probe.

"CALIBRATION" (JA PH series)

Full pH calibration procedure involves two calibration points (Offset and Slope) and it requires two buffer solutions. Default buffer solutions are pH 4.00 and pH 7.00. pH reading value can be also compensated from "pH compensation" menu. Chose "Calibration" from main menu. Fast Calibration procedure involves one point calibration (choose value closest to real field application).In the following example instrument will calibrate pH using default buffer solutions values. **Note: this procedure assumes that instrument is correctly con igured and a working pH probe connected. Otherwise unattended results may occurr. When changing pH compensation option, calibration must be repeated.**

Calib 1st Point. (Offset)

Once into "Calibration" menu move wheel on "Offset" then press wheel to enter into first point calibration submenu. Prepare 7.00pH buffer solution and dip probe's sensor on it. Wait until reading value is stable and according to buffer solution value move wheel until it is the same on display ("Cal. at" field). Default value is 7.00pH. To end procedure move cursor on "OK" and press wheel to proceed to next step. **Note: buffer solution value may change if environment temperature it's different than 20°C. Read solution's label for more information. According to this occurrence "pH Default" must be changed. If an error occurs repeat calibration using a nearer offset calibration value.**

Calib 2nd Point. (Slope)

Move wheel on "Slope" then press wheel to enter into second point calibration submenu. Prepare 4.00pH buffer solution and dip probe's sensor on it. Wait until reading value is stable and according to buffer solution value move wheel until it is the same on display ("Cal. at" field). Default value is 4.00pH.

To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes. **Note: buffer solution value may change if environment temperature it's different than 20°C. Read solution's label for more information. According to this occurrence "pH Default" must be changed.If an error occurs repeat calibration using a nearer slope calibration value.**

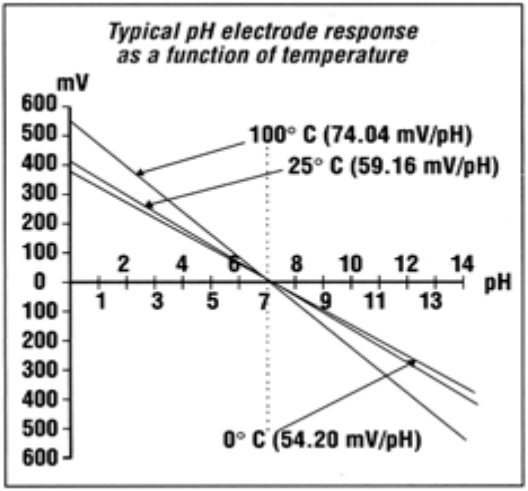

If an error occurs or to revert calibration to previous settings use "RESET CALIBRATION" menu. (see nav menu page 25)
To obtain reliable results the controller should be correctly installed, configured and connected to a working probe.

"CALIBRATION" (JA RH series)

ORP calibration procedure involves probe's selection with one point (P1) calibration. From "Menu Calibration" choose "ORP probe". Choose between "FAST CALIBTRATION" (one buffer solution required) or "FULL CALIBRATION" (two buffers solutions required for better calibration accuracy)

Note: This procedure assumes that instrument is correctly configured and a working ORP probe connected and installed on system. Measurement must be performed using plant water. Otherwise unattended results may occurr.

Calibration can be performed in two ways: the first by alignment with a buffer solution, the second by reading the residual ORP level of the pool with the DPD1, comparison with the attached graph followed by alignment of the pumps group. The choice of method is exclusively at the user's discretion. In both cases, to establish the set-point value, a check using the DPD1 or other analysis system is necessary. The enclosed graphs provide a reference between the mV value read by the pumps group and the quantity of residual ORP expressed in mg/litre, and are linked to the pH value.

1) Measure buffer solution temperature and verify that it is the same printed on solution's label.

2) Remove protective cap from probe and wash probe's tip into water. Then dry it by shaking the probe in air.

3) Set "Cal. at" value to match buffer solution value then put probe's tip into buffer solution and wait until instrument shows a stable reading value (mV field).

4)Move cursor on "OK" and press wheel ton cofirm the new calibration value. If calibration process fails the instrment will show "CALIBRATION FAILED". Repeat procedure otherwise move on "ESC" and press wheel.

REDOX - mg FREE CHLORINE - pH GRAPHIC TABLE

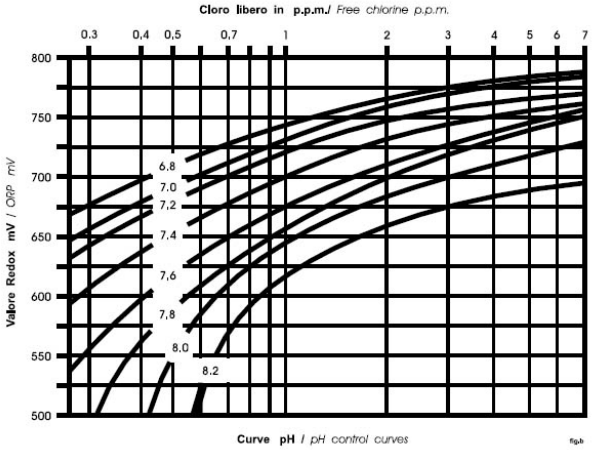

"COMPENSATION"

Conductivity measurements are temperature dependent. The degree to which temperature affects conductivity varies from solution to solution and can be calculated using the following formula:

$$Gt = Gtcal \{1 + a(T\text{-}Tcal)\}$$

where: Gt = conductivity at any temperature T in °C, Gtcal = conductivity at calibration temperature Tcal in °C, a = temperature coefficient of solution at Tcal in °C.

Substance at 25°C	Concentration	Alpha (a)
HCl	10 wt%	1.56
KCl	10 wt%	1.88
H_2SO_4	50 wt%	1.93
NaCl	10 wt%	2.14

Common alphas (a) are listed in the table above. To determine that (a) of other solutions, simply measure conductivity at a range of temperatures and graph the change in conductivity versus the change in temperature. Divide the slope of the graph by Gtcal to get a. Temperature compensation (Alpha) can be changed within 0.0% and 5.0%. It should be set according to measured chemical properties.

If a temperature probe is installed choose "Enable" for "Automatic". Otherwise select "Disable" and enter a temperature value in "Temperature" field. If the controller is connected to a temperature probe, check the "Automatic" field: temperature compensation is automatic. Otherwise choose to leave the field blank and enter a value of average temperature in the system under which compensation must be made (field TEMPERATURE).

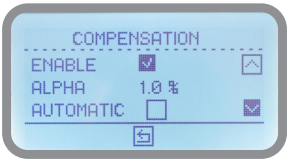

Options are:

ENABLE (tick to enable on the basis of the following parameters for the temperature compensation)

ALPHA (see explanation above)

AUTOMATIC (tick to enable automatic temperature compensation based on the reading provided by the PT100 sensor installed)

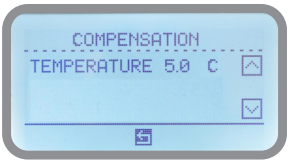

TEMPERATURE (manually enter a fixed value, if there is any installed temperature probe)

Note: when "AUTOMATIC" is enabled the "TEMPERATURE" field is not available.

"CALIBRATION" (JA CL series)

Chlorine calibration procedure is based on installed chlorine probe and may involve one or two calibration points depending on probes' model From main menu choose "Calibration". Installed probe will be automatically detected and according to model a one or two points calibration will be enabled.

Carbon Filter System

Photometer

Note: This procedure assumes that the CONTROLLER is correctly installed and configured, connected to a working probe. Calibrate using plant's temperature otherwise unattended results might occur. If something wrong occurs use RECOVERY CALIBRATION to restore to previous calibration.

Two points calibration method.

During this procedure probe must be dry and clean and not installed in plant. Use chlorine free water (or a carbon filter system) and dip probe's head into it, then ap on "First Point" (zero) to confirm it.

For Second point calibration use a plant's sample water and analyze it using a DPD (photometer) system to obtain value. Enter this value as second point calibration and confirm it.

One point calibration method (second point).

For Second point calibration use a plant's sample water and analyze it using a DPD system (photometer) to obtain value. Enter this value as second point calibration and confirm it.

"CALIBRATION" (JA TEMP series)

See page 14 (temperature calibration paragraph)

Note: This procedure assumes that controller is correctly installed and configured, connected to a working PT100 probe. Calibrate using plant's temperature otherwise unattended results may occur.

"MODBUS"

Modbus is a serial communications protocol originally published by Modicon (now Schneider Electric) in 1979 for use with its programmable logic controllers (PLCs). Simple and robust, it has since become a de facto standard communication protocol, and it is now a commonly available means of connecting industrial electronic devices.
Set the communication speed according to the PLC system available. Set the ID assigning an UNIQUE address to avoid conflicts.

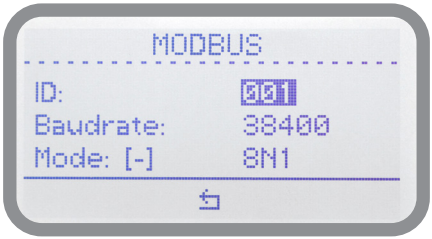

Connect the PLC through blocks 17 and 18 and enter an ID number available, baudrate (communication speed) and communication mode (i.e.: 8N1, data bit, parity check and stop bit).

"FLOW"

Flow contact (see "SEPR" blocks on page 4) can be enabled to stop a dosing procedure using a N.O. contact mode (normally open) or N.C. contact mode (normally closed) when status on blocks changes. Rotate wheel to choose between: **"DISABLE"**, **"REVERSE"** (N.O. contact) or **"DIRECT"** (N.C. contact). Furthermore "Flow contact" can starts after a specified time when contact status changes. To set it move wheel on "Delay", click it and rotate to choose time (from 0 to 59 seconds). Confirm selection by clicking wheel.

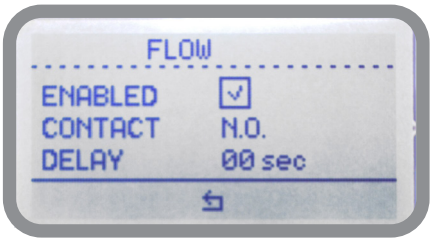

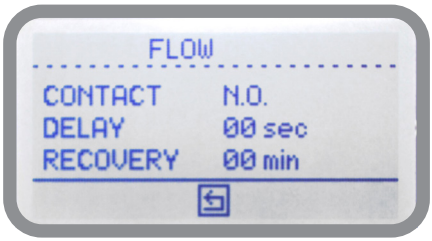

Recovery: once the contact reverts to its previous status and after this specified amount of time (0 to 59 seconds) the controller switches back to normal activities.

"GENERAL OPTIONS"

Several parameters can be set using this menu such as date, time, language, display contrast, main menu access password, tau and delay.

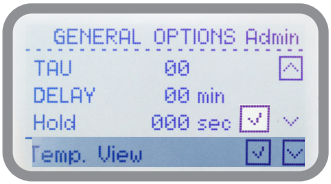

FORMAT (units format i.e.: °C, EUROPE or °F, USA)
LOCAL DATE
LOCAL TIME

LANGUAGE (interface language)
CONTRAST (display contrast to increase readability)
PASSWORD (main access password)

TAU (change to increase / decrease readings stability)
DELAY (delay on startup)
HOLD* (when reading becomes unrealiable the controller start a max 999 seconds countdown, showing last reliable reading then it continues to normally operate until it stops and shows "***" that is unattended reading). Set value to 0 to disable function. **If the check mark is selected and the reading is not reliable, the instrument still enables the outputs.**

TEMP. View (hide / show temperature value)

"OUT mA"

This menu allows to configure mA current output. Parameters to set are:

MODE (selectable between 0-20 or 4-20 mA current output)
Max mA: maximum probe's reading value at 20 mA current
Min mA: minimum probe's reading value at 0 or 4 mA current
Disable / Enable on alarm: enable or disable output on flow alarm

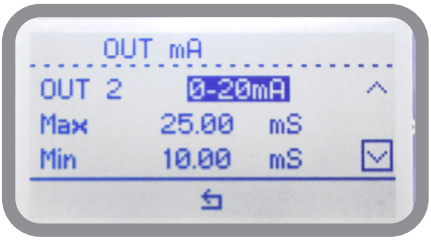

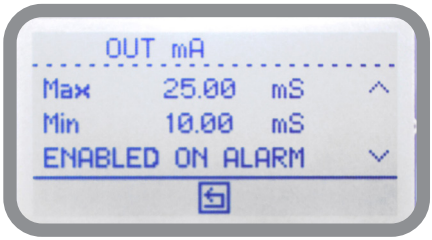

"STANDBY"

Standby contact can be enabled to stop a dosing procedure using a N.O. contact mode (normally open) or N.C. contact mode (normally closed) when status on blocks changes. Rotate wheel to choose between: **"DISABLE"**, **"REVERSE"** (N.O. contact) or **"DIRECT"** (N.C. contact). Furthermore "STANDBY" can starts after a specified time when contact status changes. To set it move wheel on "Delay", click it and rotate to choose time (from 0 to 59 seconds). Confirm selection by clicking wheel.

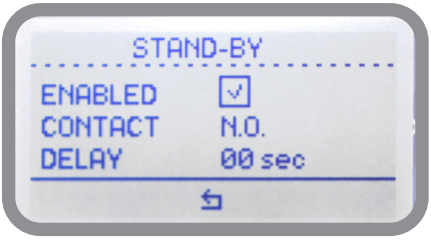

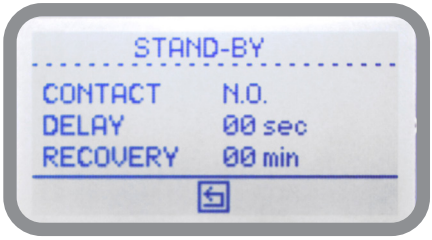

Recovery: once the contact reverts to its previous status and after this specified amount of time (0 to 59 seconds) the controller switches back to normal activities.

Technical information

Power supply: 85÷264 VAC

Conductivity range for JA CD model: autorange scale from 0 to 9999 (nS/uS/mS/S)

Conductivity range for JA PH model: 0 ÷ 14 pH

Conductivity range for JA RH model: -999 ÷ +1999 mV

Conductivity range for JA RH mod. BS0BN00200002: -2000 ÷ +2000 mV

Chlorine range for JA CL model: based on installed probe

TDS / PPM ($CaCo_3$ and NaCl): 0.001 ÷ 9999 ppm

Temperature range for JA TEMP model: 0 ÷ 200 °C

Environment Temperature: -10 ÷ 45°C (14 ÷ 113°F)

Chemical Temperature: 0 ÷ 50°C (32 ÷ 122°F)

Installation Class: II

Pollution Level: 2

Packaging and Transporting Temperature: -10 ÷ 50°C (14 ÷ 122°F)

Protection degree: IP 40

Chemical concentration / conductivity curves (JA CD series)

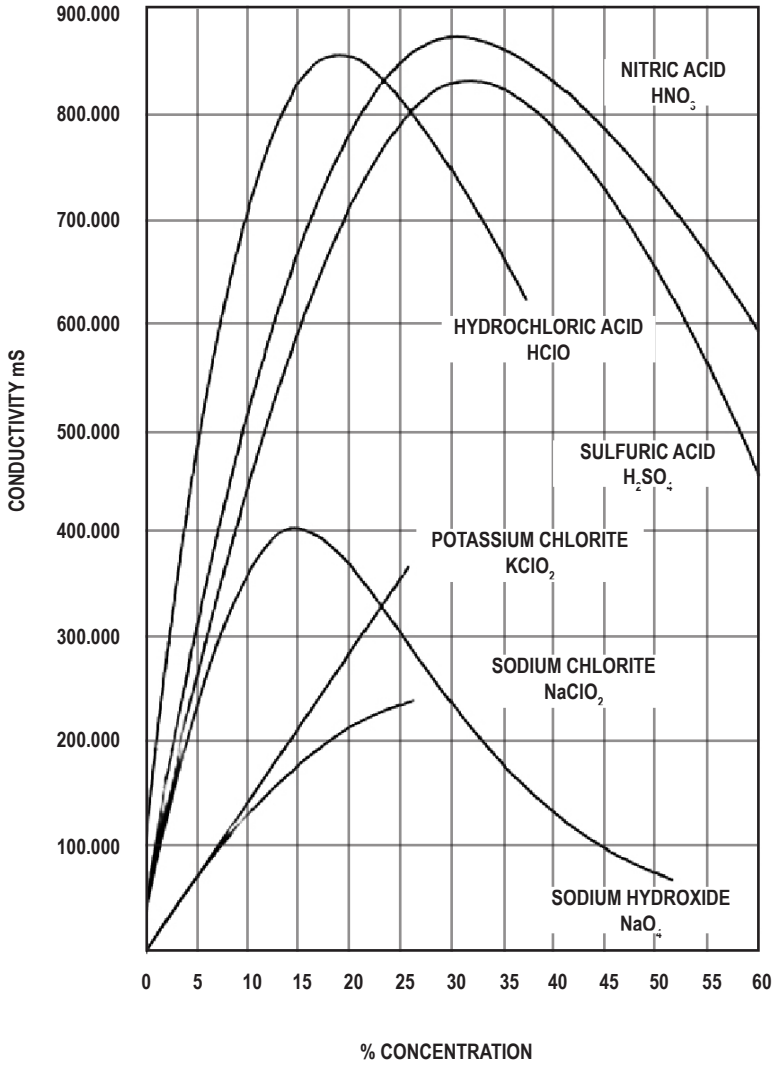

Dimensions (mm unit)

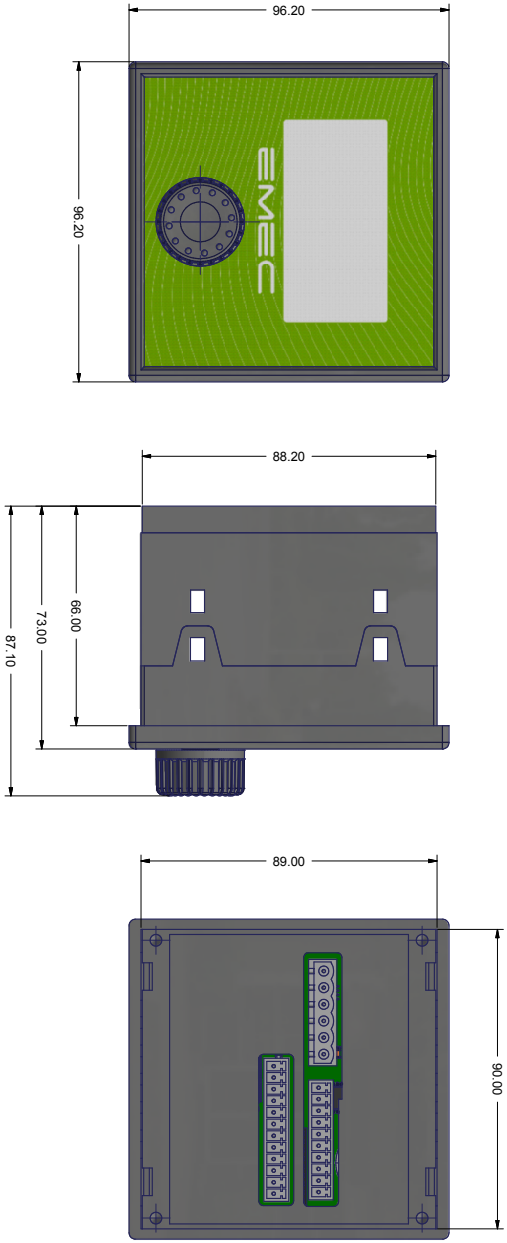

Navigation tree

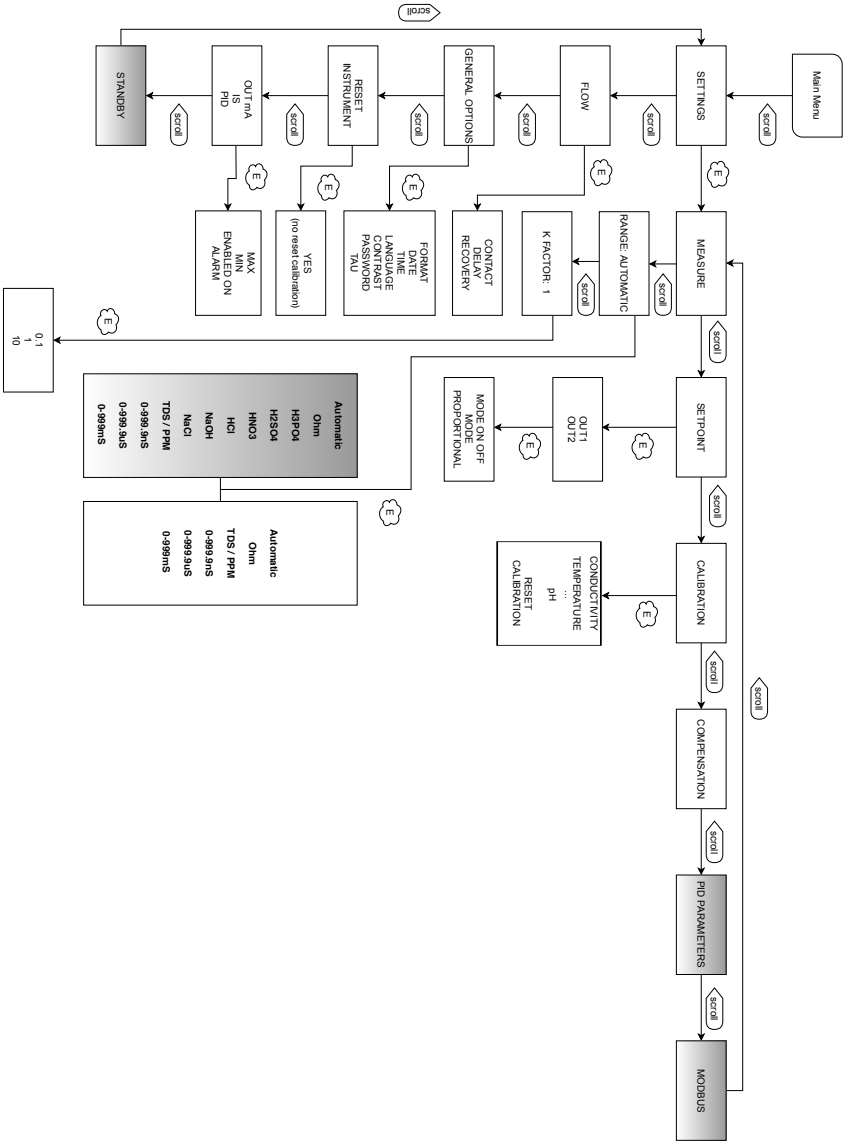

Motorized electrovalve connection

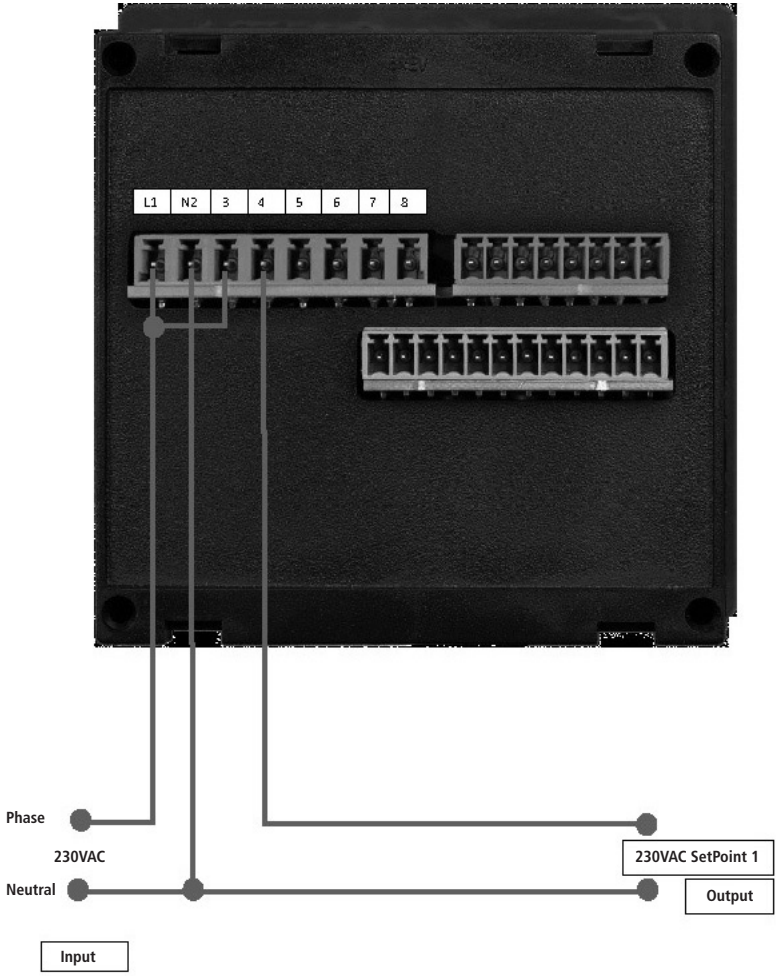

Index

Introduction 3
The wheel 3
Board connections 4
Main Screen 6
Quick Status check 7
Password 8
“Main Menu” 9
“Settings / Measure” (JA CD) 10
“Settings / Set Point” 10
“ON/OFF” mode 11
“Proportional” mode 12
“PID” 13
“Calibration” JA CD model 14
“Calibration” JA PH model 15
“Calibration” JA RH model 16
“Compensation” (JA CD model) 17
“Calibration” (JA CL / JA TEMP model) 18
“MODBUS” 19
“Flow” 20
“General Options” 20
“Out mA” 21
“Stand By” 21
Technical Information 22
Chemical concentration / conductivity curve 23
Dimensions 24
Navigation tree 25
Motorized electrovalve connection 26

Information on this manual may contain technical inaccuracies or typographical errors.
The information contained may be changed at any time without prior notification or obligation.

PRECAUTIONS RELATING TO DIRECTIVES, REGULATIONS AND STANDARDS

§ CE/EU and UKCA marking

We guarantee that this product meets the essential requirements of the applicable Directives and Regulations based on the following specifications. Please carefully consider the following specifications for use of the product in European Union member countries and the United Kingdom.

• CE/EU harmonized directives and standards

Directives

DIRECTIVE 2014/35/EU
DIRECTIVE 2014/30/EU
DIRECTIVE 2011/65/EU
DELEGATED DIRECTIVE (EU) 2015/863

Harmonized standards

EN ISO 12100
EN IEC 61326-1
CEI EN 61010-1
EN IEC 63000

• UKCA harmonized regulations and standards

Regulations

2008 2016 No. 1091
2016 No. 1101
2012 No. 3032

Harmonized standards

BS EN ISO 12100
BS EN IEC 61326-1
BS EN 61010-1
BS EN IEC 63000

Disposal of end-of-life equipment by users

This symbol warns you not to dispose of the product with normal waste. Respect human health and the environment by giving the discarded equipment to a designated collection center for the recycling of electronic and electrical equipment. For more information visit the online site.

When dismantling a pump please separate material types and send them according to local recycling disposal requirements. We appreciate your efforts in supporting your local Recycle Environmental Program. Working together we'll form an active union to assure the world's invaluable resources are conserved.