

COOLING TOWER CATALOGUE

SYSTEMS FOR COOLING TOWERS




Three thick, green, wavy lines that start from the left edge of the page and curve upwards and to the right, ending before the text. They are parallel to each other and have a smooth, flowing appearance.

WATER TREATMENT SYSTEMS

EMEC

WATER TREATMENT SYSTEMS

Worldwide

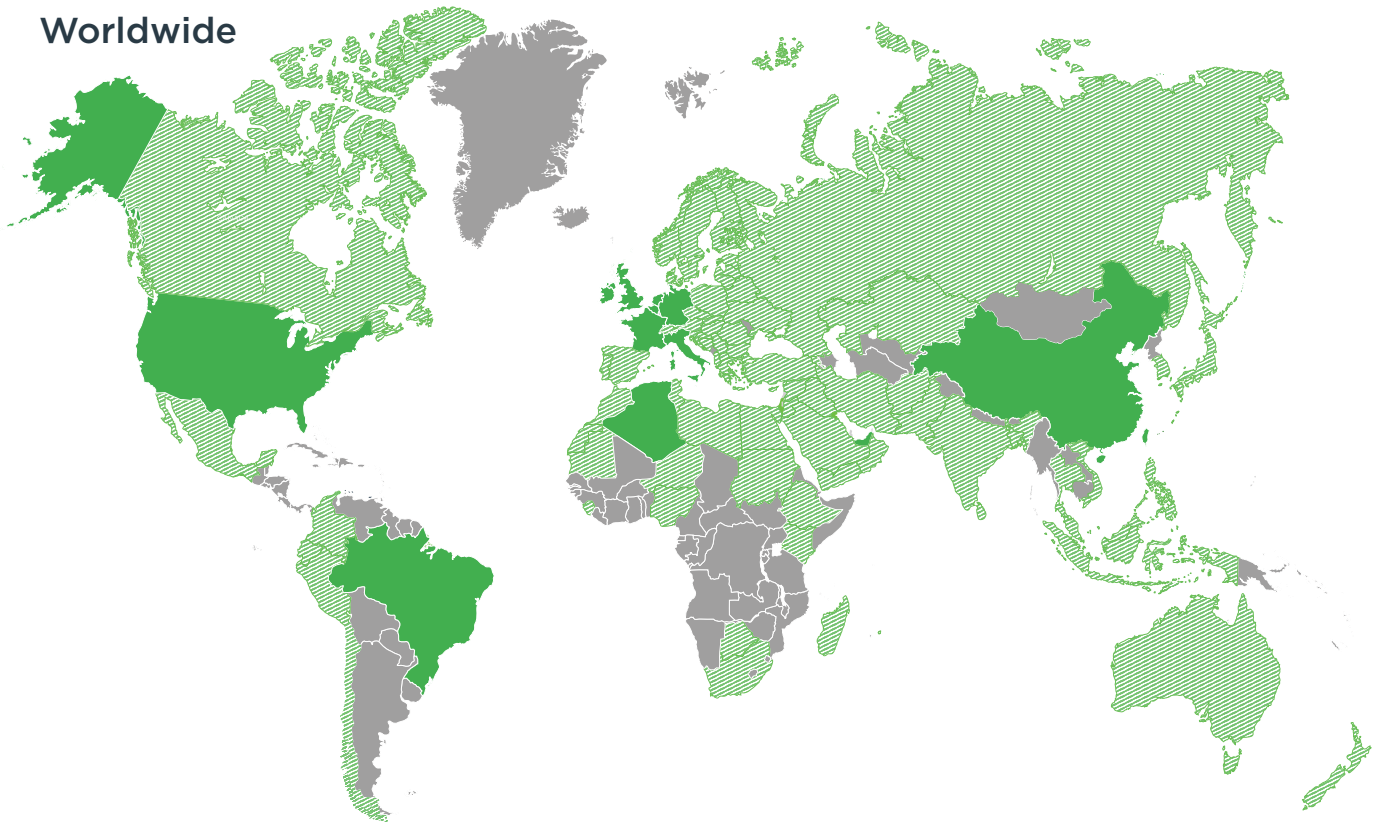

- BRANCHES
- ▨ DISTRIBUTORS

EMEC
SIMPLE AS WATER

40+ years of excellence
250+ employees
88 countries
10 branches
10+ sectors
120.000 dosing pumps/year
15.000 controllers/year
26.000 probes & sensors/year
8.000 dosing station/year
85.000 accessories



100% MADE IN ITALY
All our products are 100%
Made in Italy



WARRANTY
5 years warranty for our dosing
pumps and controllers.
Terms and conditions apply



Flexibility and innovation

Flexibility and innovation are fundamental to us.

Since 1982, we have been designing and producing reliable, cutting-edge systems for water treatment and chemicals dosing.

As a company, we are open to change and, just like water, we have branched out over time, spreading out into wide-ranging areas, from industrial water treatment to potabilization to water purification, from food and beverage industry to swimming pools.

OUR VALUE

Being at the cutting edge means constant study. Our R&D and design departments are where our heart beats.

Extremely high-profile engineers and technicians are committed to developing software and designing hardware, but also to studying and evaluating hydraulic and mechanical components.

The customers and their satisfaction have always been at the heart of what we do, so we pay constant attention to the quality of our production processes, through a constantly updated and cutting-edge range of industrial machines.

QUALITY AND SAFETY, FIRST OF ALL

We are entirely responsible for every stage of the process, from invention to delivery. Our products undergo up to 10 quality checks and are tested four times before reaching the customer.

The quality management system of our production process is **ISO 9001** certified and has customer satisfaction as its ultimate goal, as well as continuous improvement of company performance.

Customers satisfaction comes hand-in-hand with ensuring safety for them, their operators and final users.

Our dosing pumps and controllers are **UL** certified to guarantee full compliance with general requirements for safety of use, while **NSF** certifications guarantee that our pumps do not release hazardous pollutants into the water and therefore are fully safe for use in contact with drinking water, for example in the food production industry, or at recreational facilities like swimming pools and spas.

COMPETENCE AND PROFESSIONALISM

Extremely high performance, top quality and high technology are our greatest assets. But there is more.

Every day, we safeguard something equally important: human capital. Our co-workers are the best professionals on the market; the most expert and competent people.

For this reason our organizational model is designed to manage their safety and health in an organic and systematic way, respecting the international standard **BS OHSAS 18001**.

ENVIRONMENTAL SUSTAINABILITY

The adoption of an environmental management system compliant with the international standard **ISO 14001** arises from the awareness of the imprint that human activities leave on the planet.


Our environmental protection management system allows us to minimize the impact of production processes (with emissions well below the prescribed limits), of products and of raw materials used (with the recycling of most of the waste materials), also thanks to an energy saving system that covers all company spaces and to the use of renewable energy sources.

OUR CERTIFICATIONS



OUR SOCIAL CHANNELS



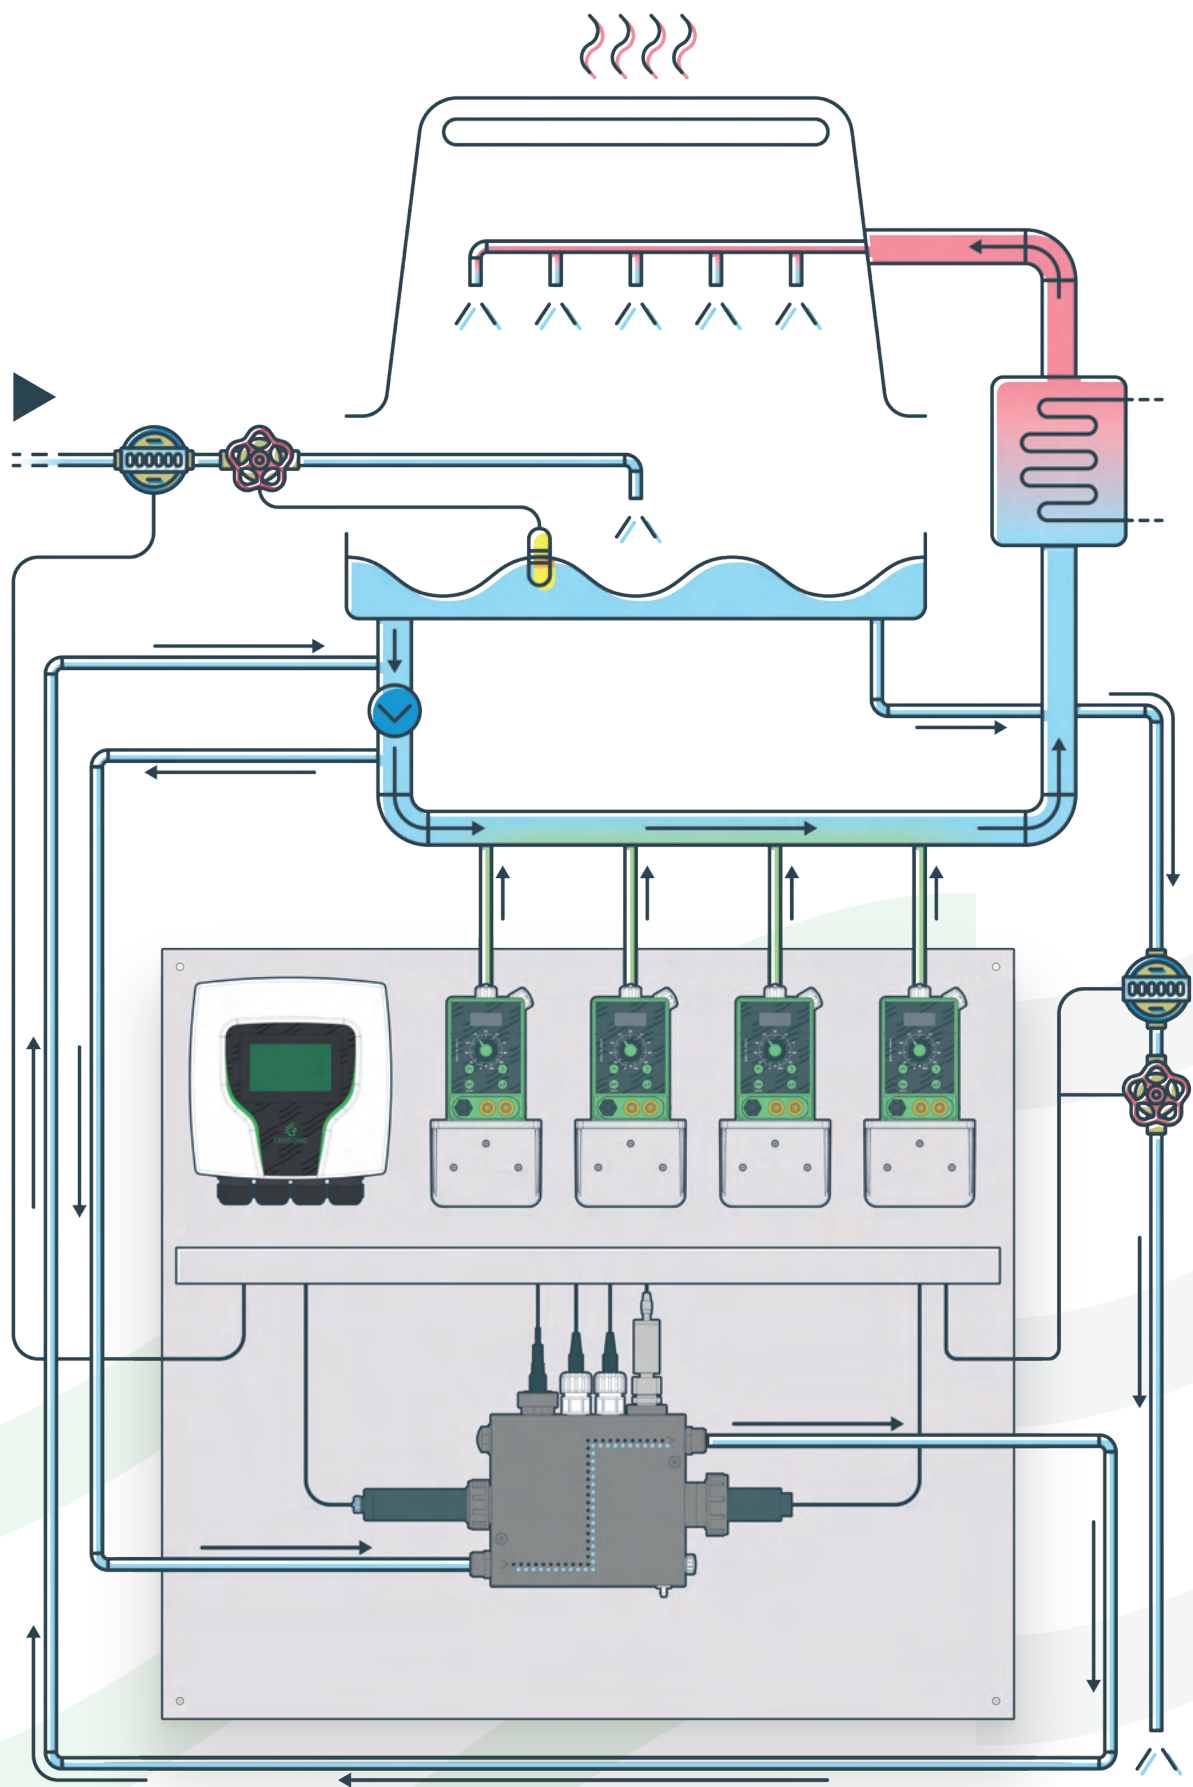

COOLING TOWERS, HOW DO THEY WORKS

6|7




The most efficient management of cooling tower systems


Cooling towers can lower the temperature of water in a plant, whether civil or industrial, by evaporating a small but sufficient quantity of water to generate cooling of the entire circulating mass, allowing it to be reused (at a lower temperature) and thus limiting consumption.

For an efficient cooling system, however, continuous monitoring and, above all, careful water treatment is essential to prevent both corrosion of system components and the formation of bacterial biofilm or other potentially dangerous biological components.


**PROBE
HOLDER**

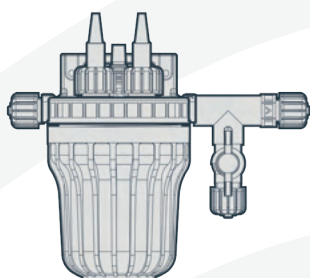

PIPING

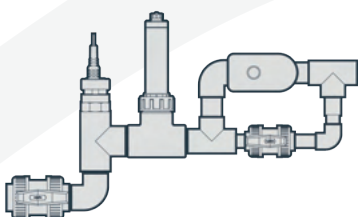

MANIFOLD

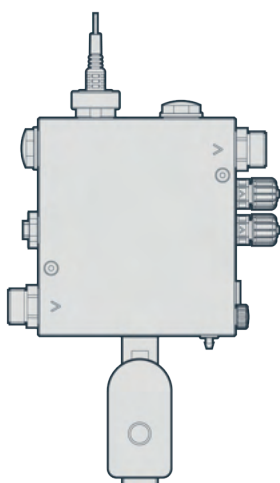

From the very beginning, EMEC has been searching for the most complete solutions to offer the highest possible efficiency in cooling tower operation. With our experience we now features solutions for cooling tower systems both for the civil sector, such as hospitals, large apartment blocks, shopping centres, and for industries such as food, paper, pharmaceuticals, sugar refineries, the chemical industry through to the heavy industry of steel mills. For those who build cooling towers and for those who are involved in water treatment and in particular in the production of chemicals. Plug-and-play solutions were chosen for their ease of handling, with the aim of having all the equipment compactly in one place rather than split up in various locations.

Given the need to handle often aggressive chemicals, our solutions are also designed to safeguard the safety of operators.

HYDRAULIC SOLUTIONS

- Simple probe holders
- Piping or manifolds to be able to both measure and inject the chemicals used for conditioning
- Piping or manifolds to handle the purging on the panel but not the injection of the chemical
- Piping or manifolds for measuring, injection but also purging directly on the panel

COMPACT AND RELIABLE SOLUTIONS

- Conductivity measurement in recirculation water for purging with motorised valve for maintaining salinity
- In case of changes, second conductivity measurement for make-up water, with subsequent purge opening
- Measurement of make-up and/or purge flow rate for control of cycles of concentration, with totaliser.
- pH measurement for controlled pH towers with acid dosing and possible redundancy (i.e. two pH measurements, with the second to control the first)
- Redox potential measurement or hypochlorite or hypobromite for oxidising biocide control/dosing
- Timers for shock dosing of biocides
- Tracer product measurement, ppm measurement of dosed product
- Corrosion measurement with sensors in various materials to see MPY
- Turbidity measurement
- Dosing for various products, depending on flow rate or analytical measurement or timer

CABIN, SKID AND ASSEMBLED PANELS. ALL THE EMEC CHOICES

Our solutions

EMEC dosing pumps and measuring and control systems can be assembled with probes and accessories on panels according to specific combinations in order to offer turnkey all-in-one solutions for cooling tower systems.

Pre-assembled panels may have:

- pumps, controllers or elements owned by the customer and assembled by EMEC
- customised logos
- backgrounds chosen by the customer
- customised sizes
- custom power panels



SYSTEMS ON SKIDS OR IN CUSTOM-MADE CABINS

The Stainless Steel or plastic skid is designed and built on client requirements.

In addition to the solution on skids, it is possible to create dosing plants in a cabin, screen guard or with window.

Electric control panels designed to control all the assembled solution.

The final product includes electrical and piping hook-ups ready for installation.

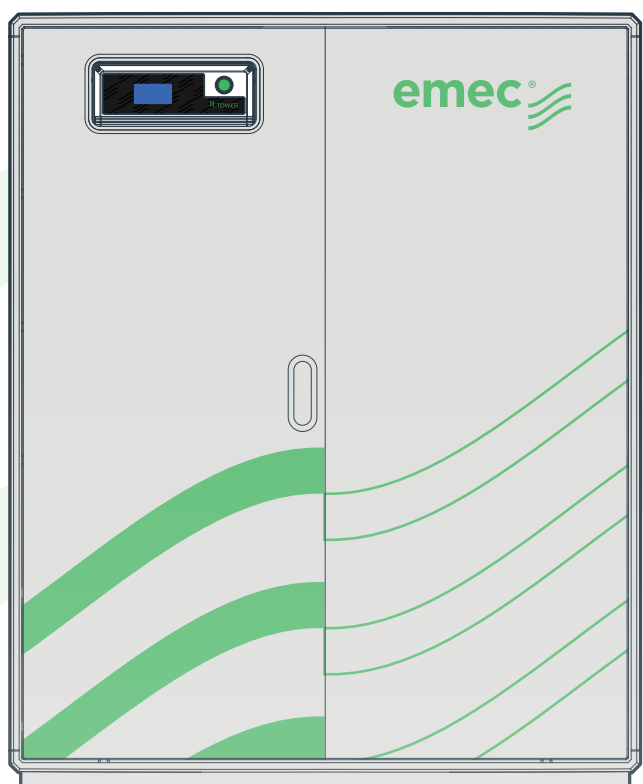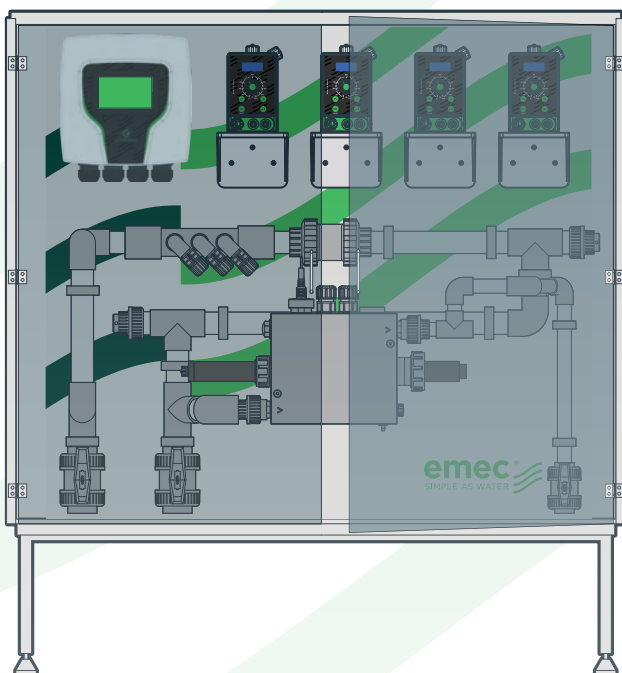



Index

MULTI CHANNELS DIGITAL CONTROLLERS

Centurio Tower/Centurio Pro

MTower Plus

MTower 1CH/2CH

8
10
12

SINGLE CHANNEL DIGITAL CONTROLLERS

LDS/LDS Plus

20

MULTI CHANNELS PRE-ASSEMBLED PANEL SOLUTIONS

Basic solutions

Intermediate solutions

Top of the range solutions

14
16
19

SINGLE CHANNEL PRE-ASSEMBLED PANEL SOLUTIONS

Basic solutions

Intermediate solutions

22
23

ONLINE CONTROL SYSTEM

ERMES

24

CENTURIO Series | CENTURIO TOWER or CENTURIO PRO

Complete control system for cooling towers

CENTURIO BASIC | USB | ETH | GSM | WIFI | MODBUS

CENTURIO control instruments are multiparameter measurement and regulation systems that combine an absolute control and an extreme ease of use with the elegance of the case created by Giugiaro Design.

CENTURIO TOWER and CENTURIO PRO are digital control instrument designed for cooling tower water treatment and equipped with LINUX operating system, high-performance ARM A5 microprocessor and a large color touchscreen display. It can manage at the same time 5 measurement parameters, read and regulate setpoints of the 5 channels and get real-time graphs. CENTURIO has also an high-capacity storage to archive data logs as well as download option via USB port.

CENTURIO PRO is a complete digital control instrument designed for managing water treatment plants, equipped with LINUX operating system, high-performance ARM A5 microprocessor and a large color touchscreen display. It can manage at the same time the main measurement parameters, read and regulate setpoints of the 6 channels and get real-time graphs. CENTURIO has also an high-capacity storage to archive data logs as well as download option via USB port.

Centurio Tower available configurations:

CENTURIO TOWER - CONDUCTIVITY

CENTURIO TOWER - INDUCTIVE CONDUCTIVITY



 **ERMES**
digital services

 **Modbus**

FEATURES - CENTURIO TOWER

Biocide programmable in 10 daily interventions.
Pre-bleed (water discharge before biocide dosing).
Blow down (discharge control on conductivity values).
Lockout (discharge valve locked for a settable time, after biocide dosing).

INPUTS

8 product level inputs
Flow input
2 water meter inputs
1 RS485 bus probe input
6 slots for channels reading

FEATURES - CENTURIO PRO

For each reading channel:
2 digital setpoints (ON/OFF), 2 proportional setpoints (IS), 1 mA output setpoint, 1 temperature setpoint
6 timers with a maximum of 10 daily schedules each
Laser level output

OUTPUTS

Alarm output
8 proportional outputs
6 on/off outputs
2 freecontact on/off outputs
6 current outputs



CHANNEL 1 - CENTURIO TOWER only

10 | 11

Conductivity

probe | ECD/EICD

range | 0.1 μ S-100mS (K=1) - 0.01 μ S-100mS (K=01)
0.001 μ S-100mS (K=001) - 1 μ S-1S (K=10)

comp. | Temperature

Inductive conductivity

probe | ECDIND

range | 0,1-3mS (K=1) - 0,3-30mS (K=01) - 0,3-300mS (K=001)

comp. | Temperature

CHANNEL 1 TO CHOOSE ONLY BETWEEN CONDUCTIVITY AND INDUCTIVE CONDUCTIVITY

CHANNELS 2 to 6 - CENTURIO TOWER CHANNELS 1 to 6 - CENTURIO PRO

pH

probe | EPH

comp. | pH in Temperature - ECL6

range | 0-14 pH

comp. | Temperature

ORP

probe | ERH

range | -999/+999 mV

comp. | Temperature

Chlorine (total, free and combined)

probe | ECL/SCL

comp. | Chlorine in Temperature

range | depending on probe

Tracers

probe | ETRC2

range | 0/999,9 ppm

comp. | Temperature

Bromine

probe | SBR

comp. | Chlorine in Temperature

range | depending on probe

Corrosion

probe | ECORR

range | 0.001/10 MPY

comp. | Temperature

Chlorine Dioxide

probe | SCL2

comp. | Chlorine in Temperature

range | depending on probe

Turbidity

probe | ETORB2

range | 0/40,00 NTU
0/400,0 NTU
0/4000 NTU

comp. | Temperature

Hydrogen peroxyde

probe | SCL9

comp. | Chlorine in Temperature

range | depending on probe

Ozone

probe | SCL10

comp. | Chlorine in Temperature

range | depending on probe

Paracetic Acid

probe | SCL11

comp. | Chlorine in Temperature

range | depending on probe

mA input

range | Analogic input module 0-20 mA

Conductivity

probe | ECD/EICD

range | 0.1 μ S-100mS (K=1) - 0.01 μ S-100mS (K=01)
0.001 μ S-100mS (K=001) - 1 μ S-1S (K=10)

comp. | Temperature

Inductive conductivity

probe | ECDIND

range | 0,1-3mS (K=1) - 0,3-30mS (K=01) - 0,3-300mS (K=001)

comp. | Temperature

MTOWER Series | MTOWER PLUS

Three parameters control system for cooling towers

MTOWER PLUS BASIC | USB | ETH | GSM | WIFI | MODBUS

MTOWER PLUS controllers are a series of fully feature control systems for cooling towers.

They manage simultaneously three parameters: pH or ORP, chlorine, conductivity or inductive conductivity (to specify on order) and temperature. Probes are not included.

They can be remotely controlled through the exclusive web management system ERMES.

Optional configurations:

MTOWER PLUS + mA output

MTOWER PLUS + 12VDC or 24VDC power supply



ALARMS

- No water flow alarm
- 3 product level alarms
- Bleed timeout alarm

INPUTS

- 6 product level inputs
- 2 water meter inputs
- Flow input
- Temperature probe input
- Stand-by input

OUTPUTS

- mA output

 **ERMES**
digital services

 **Modbus**

INPUT AND OUTPUT SHOWN IN RED ARE TO BE CONSIDERED AS OPTIONAL.



CHANNEL 1 - MTOWER PLUS | CD/PH/CL and CD/PH/RH

12 | 13

Conductivity

probe | ECD/EICD
range | 0/300,0 μ S
0/3000 μ S
0/30,0 mS
0/300,0 mS
comp. | Temperature

Inductive conductivity

probe | ECDIND
range | 0/3,000 mS
0/30,00 mS
0/300,0 mS
comp. | Temperature

CHANNEL 2 - MTOWER PLUS | CD/PH/CL and CD/PH/RH

pH

probe | EPH
comp. | pH in Temperature - ECL6
range | 0-14 pH
comp. | Temperature

CHANNEL 3 - MTOWER PLUS | CD/PH/CL only

Chlorine (total, free and combined)

probe | ECL/SCL
comp. | Chlorine in Temperature
range | depending on probe

Hydrogen peroxyde

probe | SCL9
comp. | Chlorine in Temperature
range | depending on probe

Bromine

probe | SBR
comp. | Chlorine in Temperature
range | depending on probe

Ozone

probe | SCL10
comp. | Chlorine in Temperature
range | depending on probe

Chlorine Dioxide

probe | SCL2
comp. | Chlorine in Temperature
range | depending on probe

Paracetic Acid

probe | SCL11
comp. | Chlorine in Temperature
range | depending on probe

CHANNEL 3 - MTOWER PLUS | CD/PH/RH only

ORP

probe | ERH
range | 0/1000 mV
comp. | Temperature

MTOWER Series | MTOWER 1 or 2 CHANNELS

Single or double parameters control system for cooling towers

MTOWER 1CH or 2CH BASIC | USB | ETH | GSM | WIFI | MODBUS

MTOWER 1CH and MTOWER 2CH controllers are a series of fully feature control systems for cooling towers.

MTOWER 1CH manages one parameter: conductivity or inductive conductivity (to specify on order) and temperature. Probes are not included.

MTOWER 2CH manage simultaneously two parameters: pH or ORP or chlorine, conductivity or inductive conductivity (to specify on order) and temperature. Probes are not included.

They can be remotely controlled through the exclusive web management system ERMES.

Optional configurations:

MTOWER 2CH + mA output

MTOWER 2CH + 12VDC or 24VDC power supply



ALARMS

- No water flow alarm
- 2 product level alarms
- Bleed timeout alarm

INPUTS

- 6 product level inputs
- 2 water meter inputs
- Flow input
- Temperature probe input
- Stand-by input

OUTPUTS

- mA output

 **ERMES**
digital services

 **Modbus**

INPUT AND OUTPUT SHOWN IN RED ARE TO BE CONSIDERED AS OPTIONAL.



CHANNEL 1 - MTOWER 1CH

MTOWER 2CH

CD
CD/PH, CD/RH, CD/CL and CD/TRC

14 | 15

Conductivity	Inductive conductivity
probe ECD/EICD range 0/300,0 µS 0/3000 µS 0/30,0 mS 0/300,0 mS comp. Temperature	probe ECDIND range 0/3,000 mS 0/30,00 mS 0/300,0 mS comp. Temperature

CHANNEL 2 - MTOWER 2CH

CD/PH only

pH
probe EPH comp. pH in Temperature - ECL6 range 0-14 pH comp. Temperature

CHANNEL 2 - MTOWER 2CH

CD/RH only

ORP
probe ERH range 0/1000 mV comp. Temperature

CHANNEL 2 - MTOWER 2CH

CD/CL only

Chlorine (total, free and combined)	Hydrogen peroxyde
probe ECL/SCL comp. Chlorine in Temperature range depending on probe	probe SCL9 comp. Chlorine in Temperature range depending on probe
Bromine	Ozone
probe SBR comp. Chlorine in Temperature range depending on probe	probe SCL10 comp. Chlorine in Temperature range depending on probe
Chlorine Dioxide	Paracetic Acid
probe SCL2 comp. Chlorine in Temperature range depending on probe	probe SCL11 comp. Chlorine in Temperature range depending on probe


CHANNEL 2 - MTOWER 2CH

CD/TRC only

Tracers
probe ETRC2 range 0/9999,9 ppm

Basic solutions

Pre-assembled panel with Centurio Tower or MTower systems

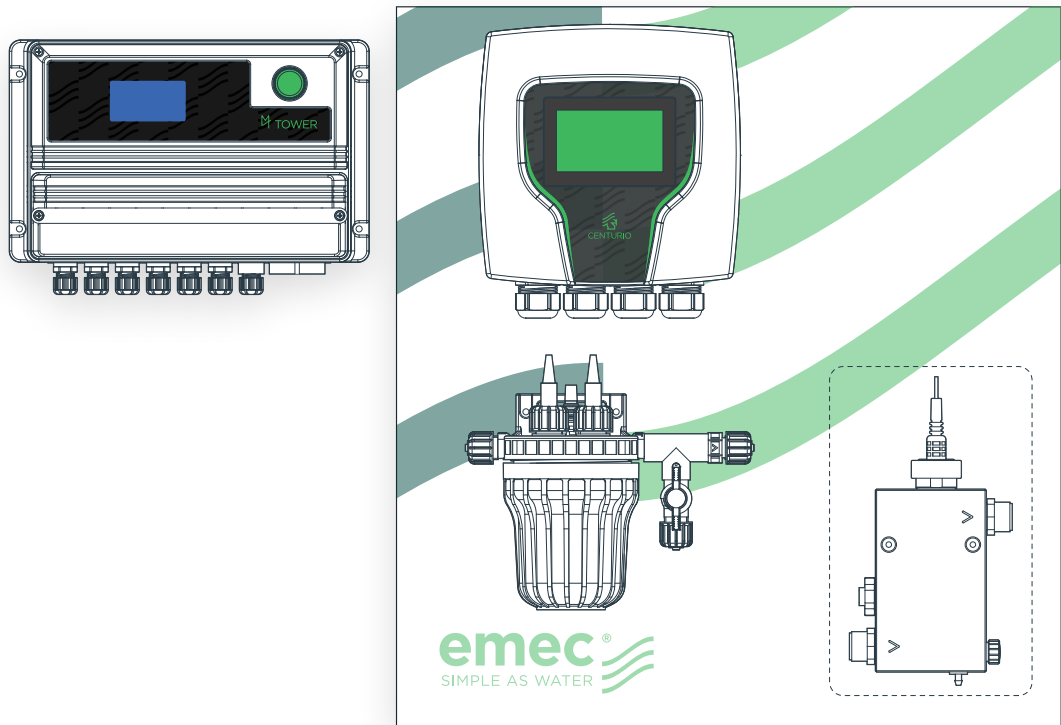

FEATURES

Panel with MTOWER controller, for managing the bleed valve and chemical measurement and dosing, and for measuring the make-up and bleed flow rate.

Available in 4 versions: Conductivity (only); Conductivity/PH; Conductivity/RH; Conductivity/PH/RH.

Optional: Also available with Centurio Tower controller
Also available with customised colour background

CONDUCTIVITY

controller MTOWER-CD	controller MTOWER-CD-PH	controller MTOWER-CD-RH	controller MTOWER-CD-PH-RH
p. holder NPED4	p. holder NPED4	p. holder NPED4	p. holder NPED4
probe ECDCCPT1	probe ECDCCPT1-EPHS	probe ECDCCPT1-ERHS	probe ECDCCPT1-EPHS-ERHS

INDUCTIVE CONDUCTIVITY


controller MTOWER-CDIND	controller MTOWER-CDIND-RH	controller MTOWER-CDIND-pH	controller MTOWER-CDIND-PH-RH
p. holder MANIFOLD-E-3	p. holder MANIFOLD-E-3 NPED1	p. holder MANIFOLD-E-3 NPED1	p. holder MANIFOLD-E-3 NPED1
probe ECDCCPT1	probe ECDCCPT1-EPHS	probe ECDCCPT1-ERHS	probe ECDCCPT1-EPHS-ERHS

The images on this page are for illustrative purposes only, for more information on possible configurations, please contact the sales department or your sales representative.



Basic solutions

Pre-assembled panel with Centurio Tower or MTower systems

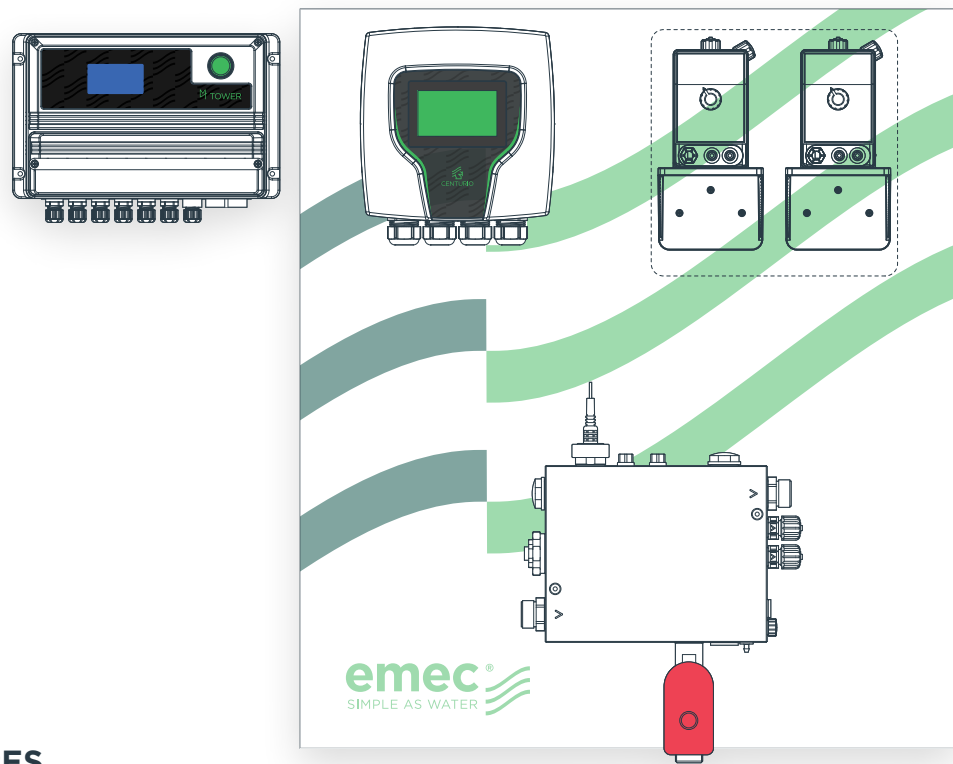

FEATURES

Panel with MTOWER controller, for managing the bleed valve and chemical dosing, equipped with 2 dosing pumps and make-up and bleed flow measurement. Equipped with MANIFOLD, 1" controllable bleed valve, 2 dosing pumps, 2 injection points.

Available in 4 versions: Conductivity (only); Conductivity/PH; Conductivity/RH; Conductivity/PH/RH.

Optional: Also available with Centurio Tower controller
Also available with customised colour background

CONDUCTIVITY

controller MTOWER-CD	controller MTOWER-CD-PH	controller MTOWER-CD-RH	controller MTOWER-CD-PH-RH
p. holder MANIFOLD 1EV	p. holder MANIFOLD PLUS 1EV	p. holder MANIFOLD PLUS 1EV	p. holder MANIFOLD PLUS 1EV
probes ECDCCPT1	probes ECDCCPT1 EPHS	probes ECDCCPT1 ERHS	probes ECDCCPT1 EPHS ERHS
pumps Up to 2x KMF1504 (with bracket)	pumps Up to 2x KMF1504 (with bracket)	pumps Up to 2x KMF1504 (with bracket)	pumps Up to 2x KMF1504 (with bracket)


INDUCTIVE CONDUCTIVITY

controller MTOWER-CDIND	controller MTOWER-CDIND-PH	controller MTOWER-CDIND-RH	controller MTOWER-CDIND-PH-RH
p. holder MANIFOLD 1EV-IND	p. holder MANIFOLD PLUS 1EV-IND	p. holder MANIFOLD PLUS 1EV-IND	p. holder MANIFOLD PLUS 1EV-IND
probes ECDCCPT1	probes ECDIND EPHS	probes ECDIND ERHS	probes ECDIND EPHS ERHS
pumps Up to 2x KMF1504 (with bracket)	pumps Up to 2x KMF1504 (with bracket)	pumps Up to 2x KMF1504 (with bracket)	pumps Up to 2x KMF1504 (with bracket)

The images on this page are for illustrative purposes only, for more information on possible configurations, please contact the sales department or your sales representative.

Intermediate solutions

Pre-assembled panel with Centurio Tower system

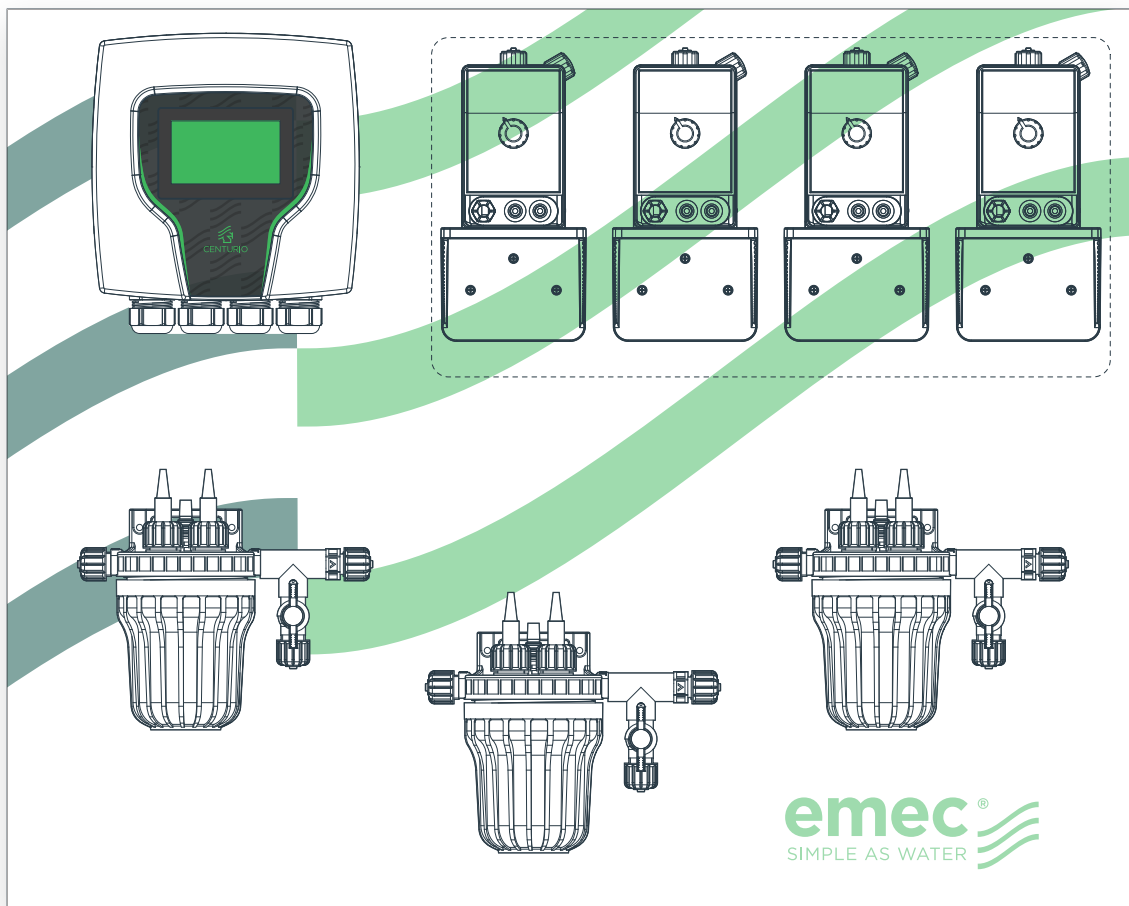

FEATURES

Panel with CENTURIO PRO controller, up to 3 conductivities, therefore up to 3 purges, equipped with 4 dosing pumps: one for inhibitor in make-up function and 3 for biocide shock dosing. (Up to 6 purges can be implemented).

Available in 2 versions: Capacitive Conductivity and Inductive Conductivity.

Optional: Also available with customised colour background

CONDUCTIVITY

controller | CENTURIO PRO-CD-CD-CD

p. holder | 3x NPED4

probes | 3x ECDCCPT

pumps | Up to 4x KMF1504
(with bracket)

INDUCTIVE CONDUCTIVITY

controller | CENTURIO PRO-CDIND-CDIND-CDIND

p. holder | 3x MANIFOLD-3-E

probes | 3x ECDIND


pumps | Up to 4x KMF1504
(with bracket)

The images on this page are for illustrative purposes only, for more information on possible configurations, please contact the sales department or your sales representative.

Intermediate solutions

Pre-assembled panel with Centurio Tower system

18|19

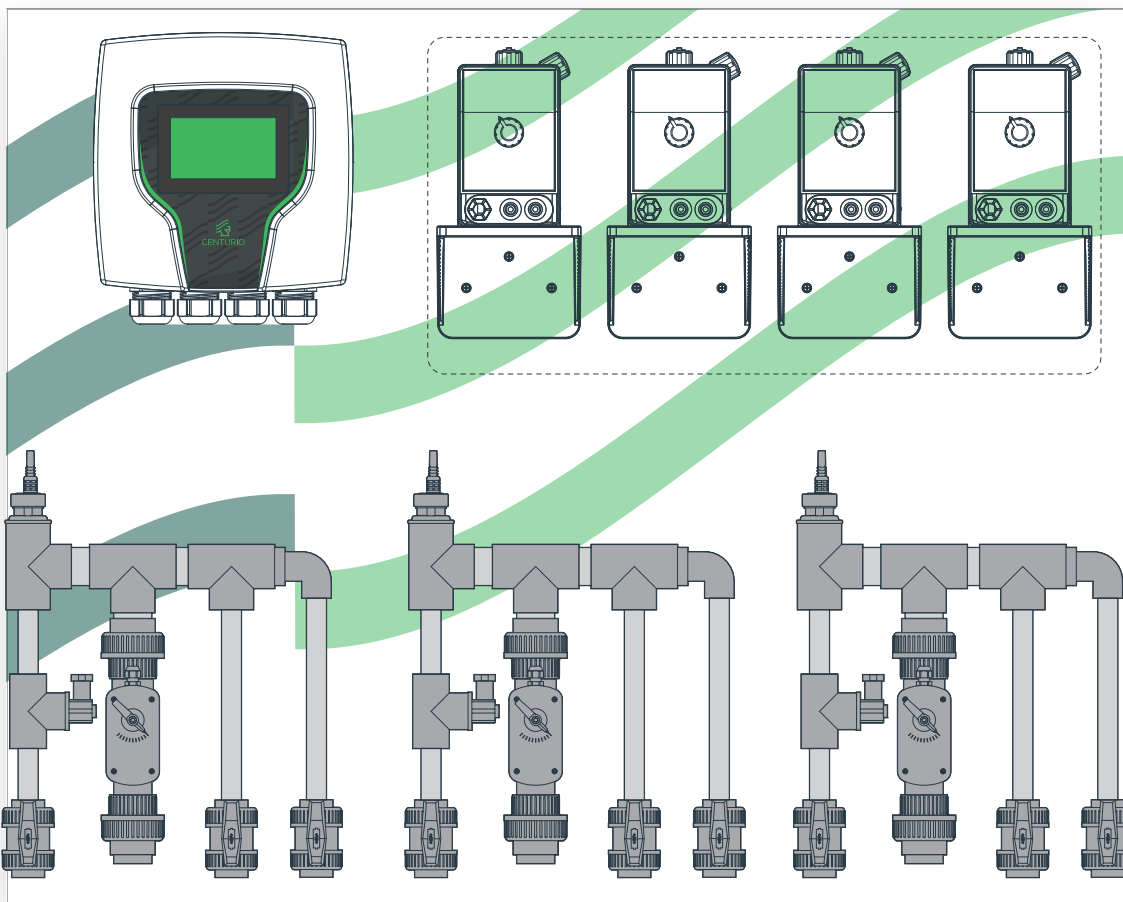

FEATURES

Panel with CENTURIO PRO controller, up to 3 conductivities, therefore up to 3 purges, equipped with EV and 4 dosing pumps: one for inhibitor in make-up function and 3 for biocide shock dosing. (Up to 6 purges can be implemented).

Available in 2 versions: Capacitive Conductivity and Inductive Conductivity.

Optional: Also available with customised colour background

CONDUCTIVITY

controller | CENTURIO PRO-CD-CD-CD

p. holder | 3x PIPING with EV

probes | 3x ECDCCPT

pumps | Up to 4x KMF1504
(with bracket)

INDUCTIVE CONDUCTIVITY

controller | CENTURIO PRO-CDIND-CDIND-CDIND

p. holder | 3x PIPING with EV


probes | 3x ECDIND

pumps | Up to 4x KMF1504
(with bracket)

The images on this page are for illustrative purposes only, for more information on possible configurations, please contact the sales department or your sales representative.

Intermediate solutions

Pre-assembled panel with Centurio Tower or MTower systems

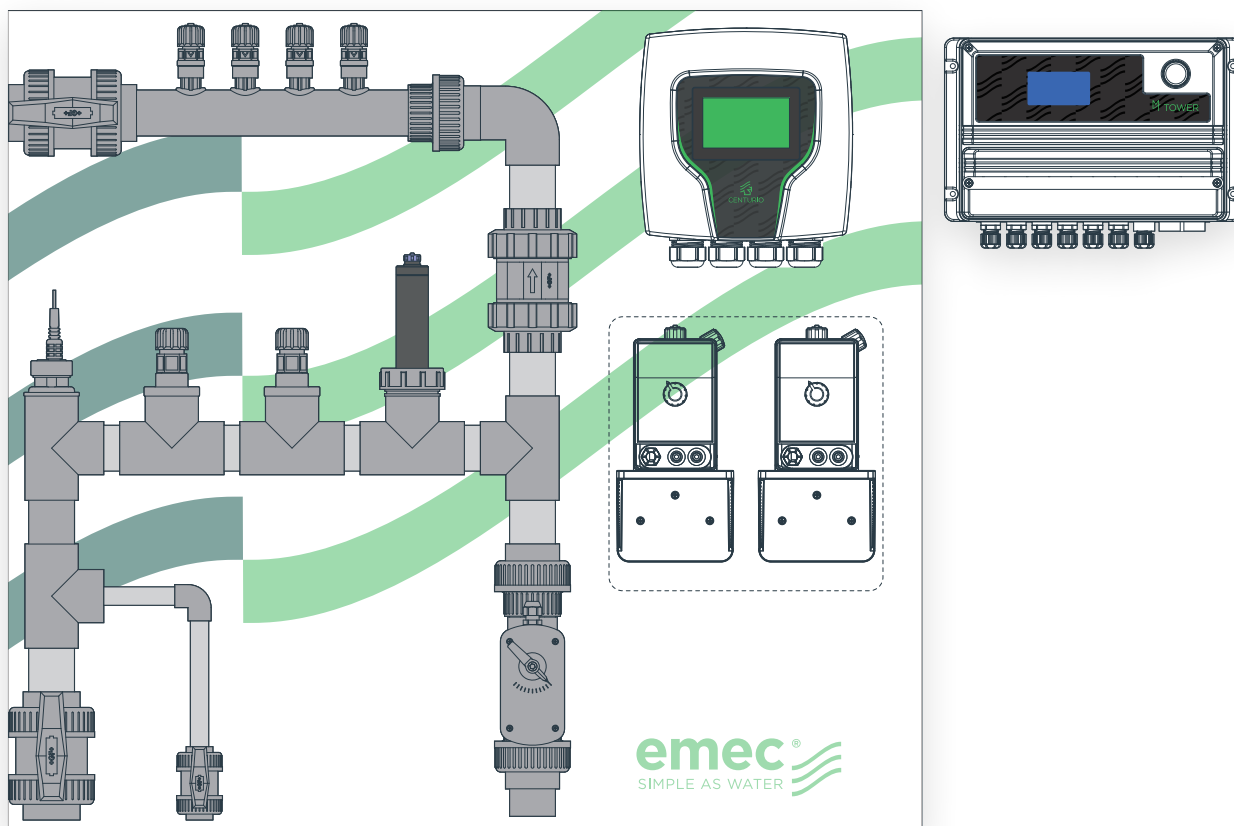

FEATURES

Panel with CENTURIO/MTOWER controller, with three measurements (CD, pH and Redox), measurement and metering of make-up and purge flow, with PIPING for measurement, 1 1/4" purge and 4 injection points, equipped with 2 dosing pumps (expandable).

Available in 2 versions: Capacitive Conductivity and Inductive Conductivity.

Optional: Also available with customised colour background

CONDUCTIVITY

controller | CENTURIO/MTOWER-CD-PH-RH

p. holder | PIPING with EV and injection points

probes | ECDCCPT
EPHS
ERHS

pumps | Up to 2x KMF1504
(with bracket)

INDUCTIVE CONDUCTIVITY

controller | CENTURIO/MTOWER-CD-PH-RH

p. holder | PIPING with EV and injection points

probes | ECDIND
EPHS
ERHS

pumps | Up to 2x KMF1504
(with bracket)


The images on this page are for illustrative purposes only, for more information on possible configurations, please contact the sales department or your sales representative.



Top of the range solutions

20 | 21

Modular pre-assembled panels with Centurio Tower system

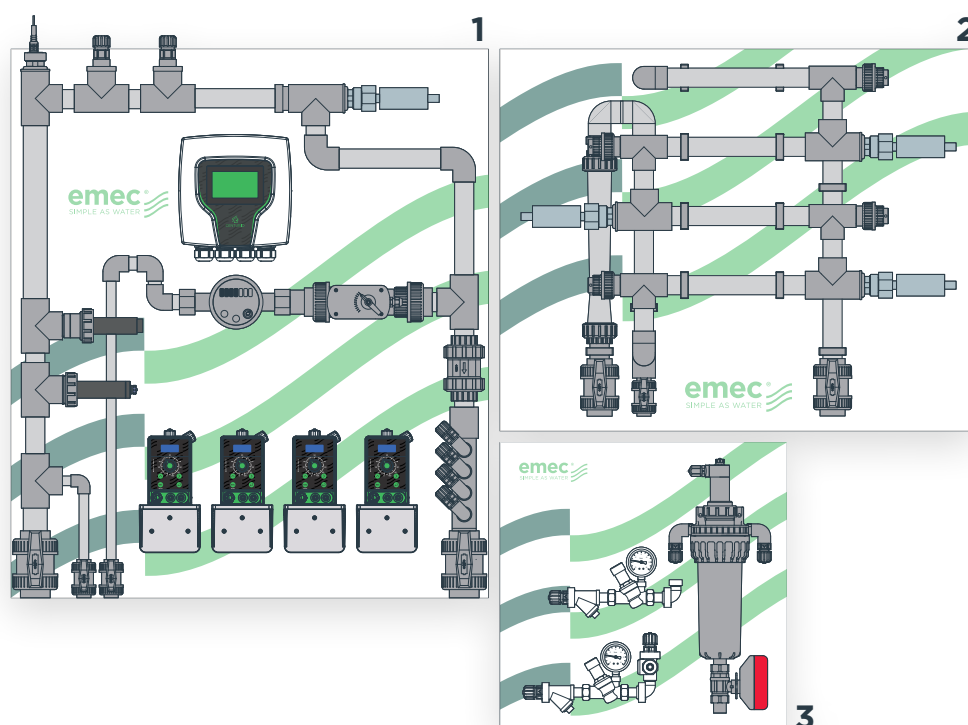

FEATURES

Top of the range panel with CENTURIO-TOWER controller, with up to 6 measurements (CD, pH and Redox, Tracer, Corrosion and Turbidity), measurement and metering of make-up and purge flow rate, with litre counter and valve on the panel, with PIPING for measurement, 1 1/4" purge and 4 injection points, equipped with 4 dosing pumps. With separate panels for turbidity probe and double/triple corrosion measurement.

The panel is modular so you can remove or put in probes, valves, dosing pumps.

Available in 2 versions: Capacitive Conductivity and Inductive Conductivity.

Optional: Also available with customised colour background

1 - CONDUCTIVITY

controller | CENTURIO

p. holder | PIPING with EV and injection points for purge flow rate measurement

probes | ECDCCPT
ETRC2
ECORR
EPHS
ERHS

pumps | Up to 4x KMF1504
(with bracket)

1 - INDUCTIVE CONDUCTIVITY

controller | CENTURIO

p. holder | PIPING with EV and injection points for purge flow rate measurement

probes | ECDIND
ETRC2
ECORR
EPHS
ERHS

pumps | Up to 4x KMF1504
(with bracket)

3- TURBIDITY

p. holder | NPED TORB

probes | ETORB2

other | Cleaning Kit

2 - CORROSION

probes | Up to 3x ECORR

other | Corrosion specimen holder kit

The images on this page are for illustrative purposes only, for more information on possible configurations, please contact the sales department or your sales representative.

Series LDS | LDS or LDS PLUS

LDS is a single reading system with setpoints

LDS PLUS is a single reading system with PID regulation

LDS or LDS PLUS BASIC | USB | ETH | GSM | WIFI | MODBUS

LDS PLUS controllers are a series of single reading digital systems with PID regulation. LDS controllers are a series of single reading controllers that meet a wide range of applications.

Both of two have: easy control by encoder wheel, flow control, local & remote control, ERMES web communication, permanent data storage with system log, PT100 temperature probe, stand-by input, water meter input (only LDS PLUS), alarms, programmable delay at dosing start-up (up to 60 minutes), automatic temperature compensation, probe readout menu (LDSCDIND PLUS / LDSCDIND), different working modes [on/off, impulsive proportional, proportional PWM and fixed

PWM, PID (only LDS PLUS)], automatic or manual dosing activity, mA output (optional for LDS), mA water meter input (optional for LDS PLUS only), probe cleaning and 5 relais [2 setpoint; alarm; probe cleaning; circulation (only for LDS PLUS)].

Optional configurations:

LD MULTICHANNEL PLUS + mA output

LD MULTICHANNEL PLUS + 12VDC or 24VDC power supply

LD MULTICHANNEL PLUS + LED strip



ALARMS

- General alarm
- No water flow alarm
- Out of range alarm
- Level alarm
- Max dosing alarm
- Damaged probe alarm

INPUTS

- Product level inputs
- Flow input
- mA water meter input (only for LDS PLUS)
- Temperature probe input
- Stand-by input

OUTPUTS

- Alarm output
- mA output (optional for LDS)
- Proportional outputs
- Set points outputs (only for LDS PLUS)
- Relay outputs
- Opto coupled output (only for LDS PLUS)

 **ERMES**
digital services

 **Modbus**



CH 1 - LDS or LDS PLUS | CD only

22 | 23

Conductivity

probe | ECD/EICD

range | 0/300,0 μ S - 0/3000 μ S - 0/30,0 mS - 0/300,0 mS

comp. | Conductivity in temperature

CH 1 - LDS or LDS PLUS | CDIND only

Inductive conductivity

probe | ECDIND

range | 0/3,000 mS - 0/30,00 mS - 0/300,0 mS

comp. | Conductivity in temperature

CH 1 - LDS or LDS PLUS | PH only

pH

probe | EPH

comp. | pH in Temperature - ECL6

range | 0-14 pH

CH 1 - LDS or LDS PLUS | RH only

ORP

probe | ERH

range | 0/1000 mV

CH 1 - LDS or LDS PLUS | CL only

Chlorine (total, free and combined)

probe | ECL/SCL

comp. | Chlorine in Temperature

range | depending on probe

Hydrogen peroxyde

probe | SCL9

comp. | Chlorine in Temperature

range | depending on probe

Bromine

probe | SBR

comp. | Chlorine in Temperature

range | depending on probe

Ozone

probe | SCL10

comp. | Chlorine in Temperature

range | depending on probe

Chlorine Dioxide

probe | SCL2

comp. | Chlorine in Temperature

range | depending on probe

Paracetic Acid

probe | SCL11

comp. | Chlorine in Temperature

range | depending on probe

CH 1 - LDS or LDS PLUS | ETORB2 only

Turbidity

probe | ETORB2

range | 0/4000 NTU

CH 1 - LDS or LDS PLUS | DO only

Dissolved Oxygen

probe | EOLUM

range | 20 mg/l O₂

comp. | Temperature and pressure

CH 1 - LDS or LDS PLUS | TRC only

Tracers

probe | ETRC2

range | 0/9999,9 ppm

CH 1 - LDS or LDS PLUS | FL only


Fluoride

probe | EFL

range | conc. 0/3,00 ppm (0,01 ppm) - mV 0/1000,00 ppm (0,01 ppm)

Basic solutions

Pre-assembled panel with LDS system

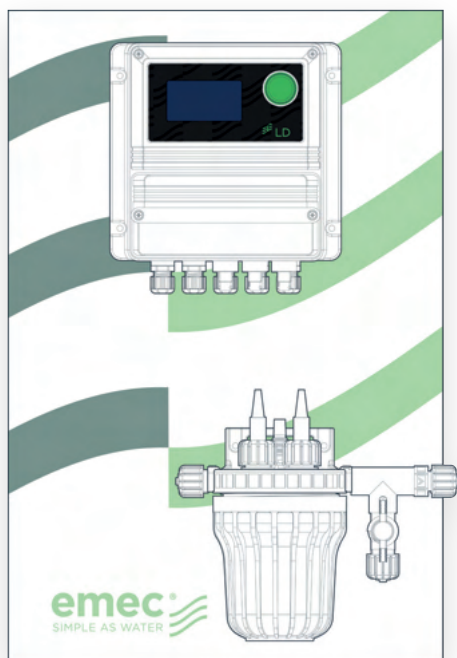

FEATURES

Panel with LDSCD controller for purge valve management, with socket probe-holder.

Avail. in 2 versions: Capacitive Conductivity and Inductive Conductivity.

Optional: Also available with customised colour background

CONDUCTIVITY

controller | LDS-CD

p. holder | NPED4


probe | ECDCCPT

INDUCTIVE CONDUCTIVITY

controller | LDS-CDIND

p. holder | MANIFOLD-E-3

probe | ECDIND

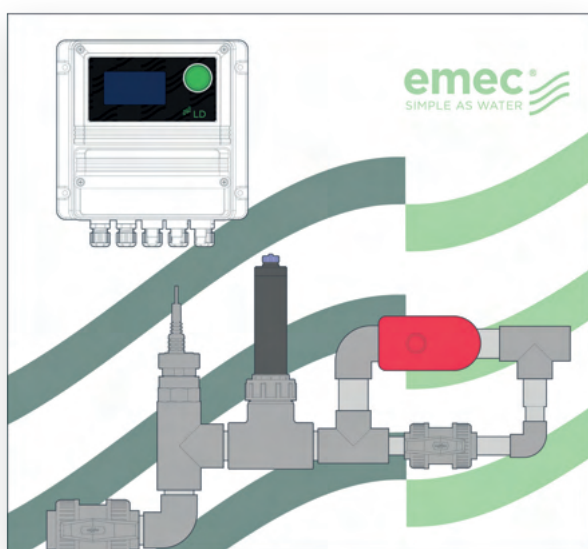

FEATURES

Panel with LDSCD controller for managing the 1" partitionable bleed valve, included in the panel.

Avail. in 2 versions: Capacitive Conductivity and Inductive Conductivity.

Optional: Also available with customised colour background

CONDUCTIVITY

controller | LDS-CD

p. holder | PIPING with 1" EV

probe | ECDCCPT

INDUCTIVE CONDUCTIVITY

controller | LDS-CDIND


p. holder | PIPING with 1" EV

probe | ECDIND

Intermediate solutions

Pre-assembled panel with LDS system

24 | 25

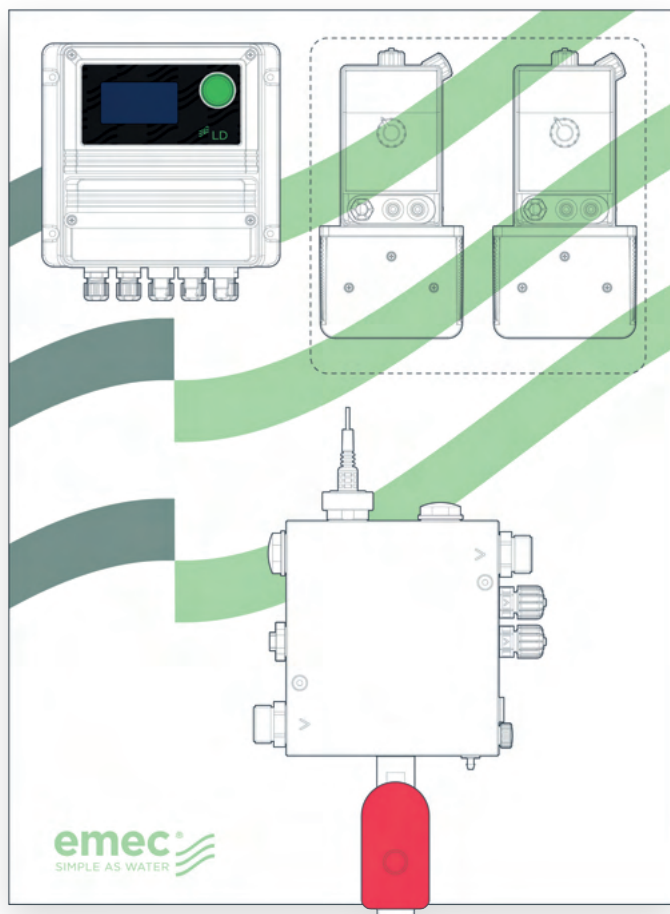

FEATURES

Panel with LDSCD controller for managing the 1" partitionable bleed valve, included in the panel, equipped with a shock timer pump and an inhibitor pump, with injection points.

Available in 2 versions: Capacitive Conductivity and Inductive Conductivity.

Optional: Also available with customised colour background

CONDUCTIVITY

controller | LDS-CD

p. holder | MANIFOLD with 1" EV

probes | ECDCCPT

pumps | KMF1504 (with bracket)
KEN1504 (with bracket)

INDUCTIVE CONDUCTIVITY

controller | LDS-CDIND


p. holder | MANIFOLD with 1" EV with 2 injection points

probes | 3x ECDIND

pumps | KMF1504 (with bracket)
KEN1504 (with bracket)

The images on this page are for illustrative purposes only, for more information on possible configurations, please contact the sales department or your sales representative.

REMOTE MEASUREMENT AND CONTROL

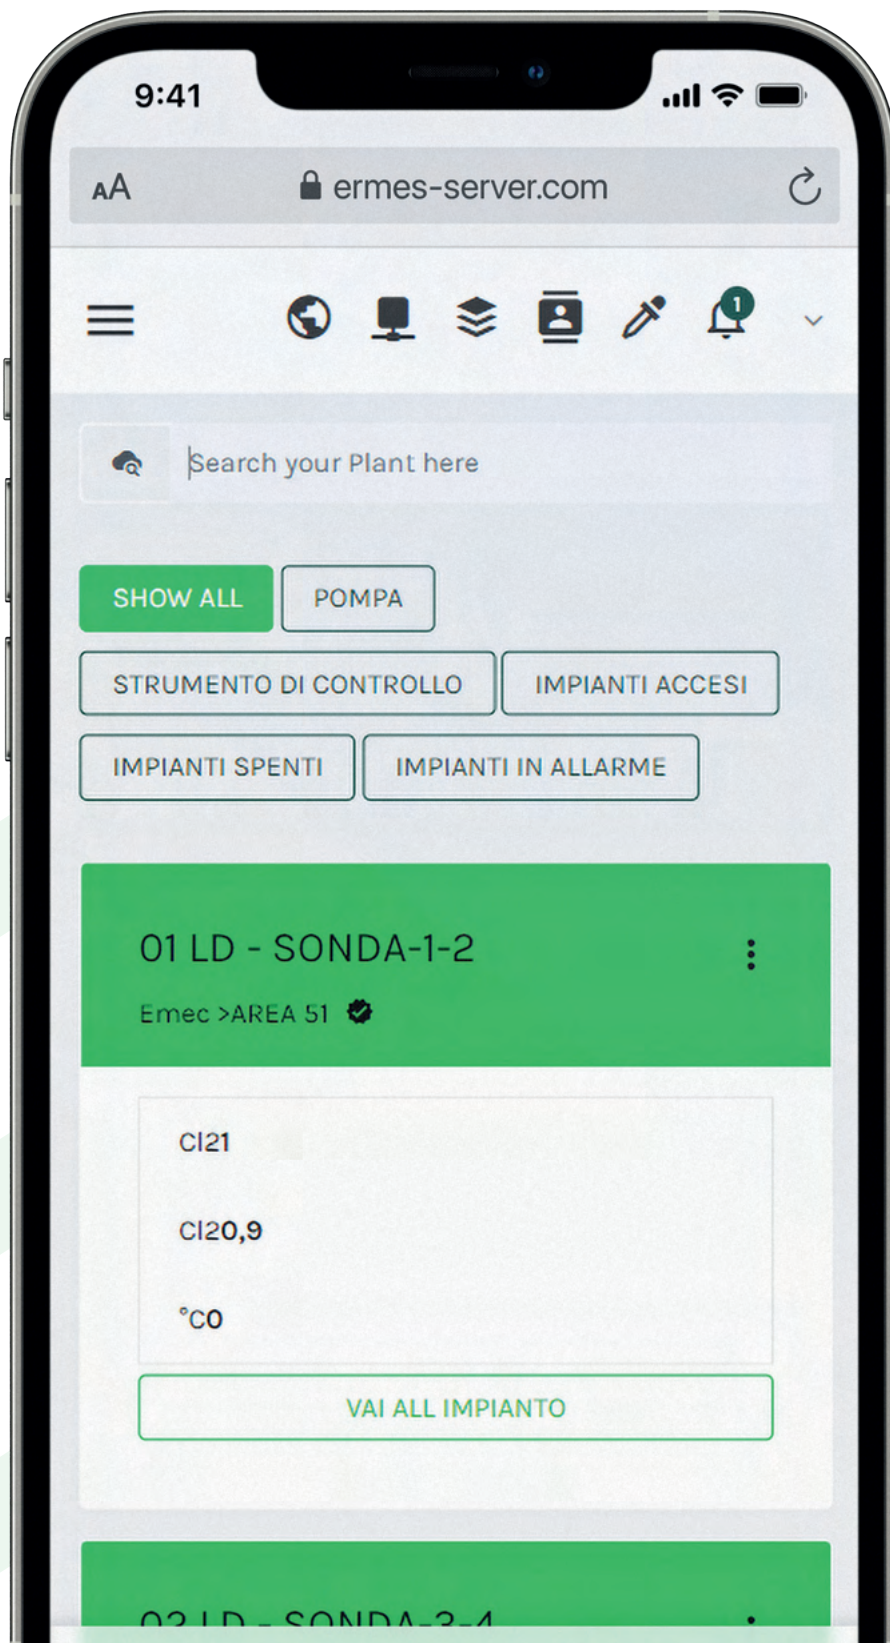



Remote measurement and control

Through ERMES online service you can remotely control and regulate all the parameters of all EMEC enabled products and interactively monitor probes, instrument inputs, products level, temperature and setpoints.

HOW DOES ERMES WORK?

Enter **www.ermes-server.com**, register for free, configure and name your systems. All EMEC controllers with encoder and ETHERNET or 3G/4G configuration will be immediately connected and available.

In addition to the remote control, through ERMES you can receive, via email, alarm messages with various report options on the status of your systems, including loss of communication.

If you have a controller with 3G/4G configuration you can also receive reports on your phone via SMS.

On request, the controllers can be supplied with a SIM card and mobile data subscription (only on controllers equipped with a 3G/4G module. Subscription paid by the customer).

ADVANTAGES

- Less plant intervention and inspections.
- Reports on the current status of the network's devices and connections (probes, outputs, alarms, setpoints)
- Instant alarm notifications via sms or email
- Data report of all plant systems
- Activity log like graphs and charts that can be downloaded on your PC (excel or pdf)

EMEC COMPATIBLE SYSTEMS for Cooling Towers:

- | | |
|------------------|------------|
| ■ CENTURIO TOWER | (p. 8-9) |
| ■ M-TOWER PLUS | (p. 10-11) |
| ■ M-TOWER 2 CH | (p. 12-13) |
| ■ M-TOWER | (p. 12-13) |
| ■ LDS PLUS | (p. 20-21) |
| ■ LDS | (p. 20-21) |

CONFIGURATION	FEATURES	CONNECTION TYPE	REQUIREMENTS	FUNCTIONS
BASIC	/	/	/	RS485 link to EMEC instruments
ADVANCED USB	USB	Download data log from controller to Usb drive	/	RS485 link to other EMEC instruments Data Log recording on USB drive
ETHERNET	LAN network	Remote control via WEB APP ERMES (www.ermes-server.com)	LAN (RJ-45) network	RS485 link to other EMEC instruments ERMES Web App (PC, smartphone, tablet) Email Alarm messages
3G/4G	MOBILE connection	Remote control via WEB APP ERMES (www.ermes-server.com)	Mobile Network Coverage	RS485 link to other EMEC instruments ERMES Web App (PC, smartphone, tablet) Email/SMS Alarm messages
MODBUS	PLC connection to other devices via RS485 or TCP/IP (only Centurio)	PLC plant management	/	PLC connection output for parameters reading/setting
WIFI	WIFI connection between instrument and web	Remote control via WEB APP ERMES (www.ermes-server.com)	WIFI Network Coverage	RS485 link to other EMEC instruments ERMES Web App (PC, smartphone, tablet) Email Alarm messages



EVERYTHING UNDER CONTROL

Real-time display of all parameters of your plants and status check of all the functioning probes.




REAL-TIME OPERATIONS

Real-time managing and setting of all parameters of your plants.



REAL-TIME GRAPHS VISUALIZATION

Displaying all parameters of your plants as graphs, both from real-time data and from history of saved data.

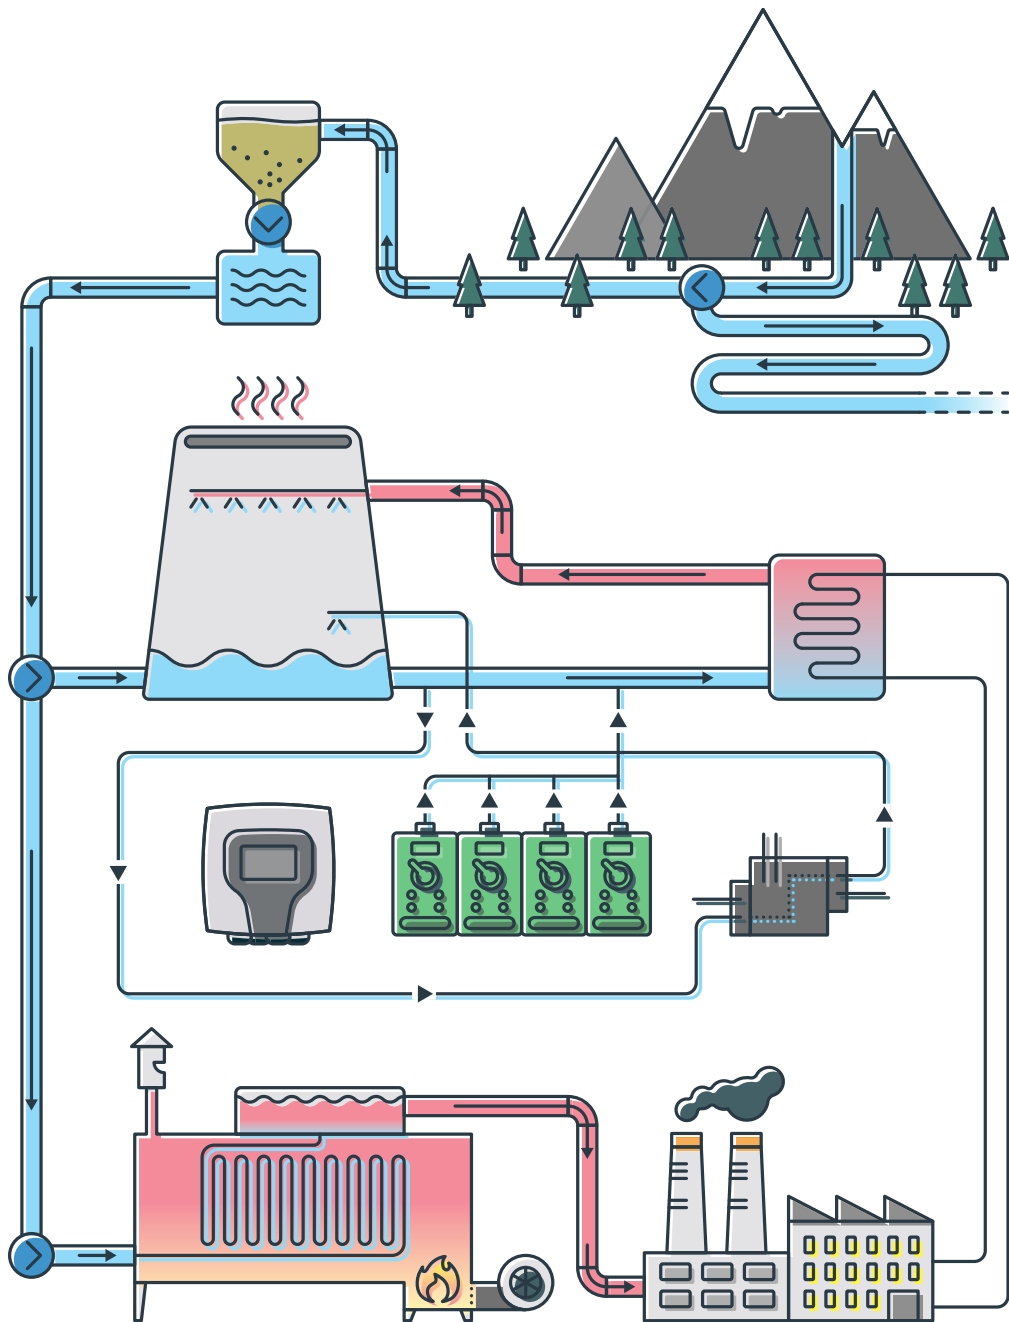

emec[®]
SIMPLE AS WATER



cod. 20201070



EMEC S.r.l. Via Donatori di Sangue, 1 - 02100 Rieti - Italia

T. +39 0746 2284 1 F. +39 0746 2284 2

info@emec.it - www.emecpumps.com